



I<sup>2</sup>C bus control colour TV receiver diagram (818C)

Attention: ① All the parts with  $\Delta$  are very important, do not make anyone insteaded.  
 ② just for reference, modify the terms without information.

# LC8633XX LA76818ADJUSTMENT INSTRUCTION

1. the method to get to "FACTORY":

① get to "FACTORY" by remote controller: adjust the volume = 0, press "MENU" when appears "Picture", in OSD state, press 6568 equal to "PROD"

② conversion method: press "SLEEP", you can convert it in the: FACTORY, B/W BALANCE, ADJUST, press "REVIEW" to normal state.

2. when in "FACTORY" state, press "PICTURE" for 7 seconds, you can set it, press program + - "to choose adjustment, "RESULT" to move cursors, "VOLUM + -" to choose the content.



LOGO1	ON. OF	SIZE	2 × 2
H · POS	20	COLOR	RED
V · POS	30		
LOGO2	ON. OF	SIZE	2 × 2
H · POS	20	COLOR	RED
V · POS	30		



3. According to 1, enter into B/W BLANCE

OSD			OSD		
S - BRI	70	0 ~ 127	☆ C. B/W	0	0 ~ 3
B - DRV	60	0 ~ 127	B - BIA	13	0 ~ 255
C - DRV	8	0 ~ 15	G - BIA	102	0 ~ 255
R - DRV	60	0 ~ 127	B - BIA	16	0 ~ 255

4. According to the method above, enter into adjust menu

5. when screens in "ADJUST MENU" state, press "silence", enter into "MENU1 - MENU10" only in the state of "B/W - BALANCE" and "ADJUST", can turn off the adjustment state.

MENU0		MENU1		MENU2		MENU3	
H. PHASE	9	PORCE 60HZ	0	RF. AGC	120	76810/7681	1
V. SIZE	70	CROSS B/W	0	VOLUME OUT	0	POWER OPTION	1
V. LINE	21	R - Y/B - Y C. BL	8	ZOOM SIZE	80	POWER LOGO	1
V. POSITION	7	R - Y/B - Y ANG.	8	WIDE SIZE	50	POWER ON KEY	1
V. SC	6	B - Y DC LEVEL	8	H. BLK. LEFT	6	BLUE/BLACK	0
NT. H. PHASE	+04	R - Y DC LEVEL	8	H. BLK. RIGHT	2	BLK PROCESS	1
NT. V. SIZE	-03	SECAM R - Y DC	8	OSD H. POSI.	11	V. MUTE P. OFF	0
NT. V. LINE	+03	SECAM R - Y DC	8	OSD V. POSI.	16	SCREEN OPT.	3
NT. V. POSI.	+03	YUV B - Y DC	8	SCR. H. POSI	0	SCREEN TIME	3
NT. V. SC	-04	YUV R - Y DC	8	SETUP SELECT	110	SCREEN TYPE	0

MENU4		MENU5		MENU6		MENU7	
TUNER OPTION	0	AV OPTION	1	GAME OPTION	31	ENGLISH OSD	1
SEARCH SPEED	0	S - VIDEO OPT.	0	CALENDAR	1	VIETNAMEES	1
SEARCH CHECK	1	SCART OPTION	1	ZOOM OPTION	1	FRANCE OSD	1
BAND OPTION	1	ONLY AV MODE	0	SENSITIVITY	0	INDONESIAN	1
VL/VH FREQ.	250	DVD OPTION	0	CHILD LOCK	0	THAI OSD	1
VH/UHF FREQ.	0	DVD OFF TIME	10	AUDIO AMP.	1	THAI DUAL	1
AV IF STATUS	0	OFF TRIGGER	106	REMEMBER AV	0	HOTEL MODE	0
MENU ICON	0	ON TRIGGER	61	LINE MODE	0	HOTEL VOLUME	100
MENU BACK	0	DVD KEY DEF.	0			ON POSITION	255
PROMPT TYPE	0	DCD PORT DER.	0				

MENU8		MENU9		MENU10	
STEREO OPT.	1	PAL OPTION	1	AFC GAIN	1
LV1116 GAIN	0	N3. 58 OPTION	1	V. SEPUP	1
SUR. MODE	0	N4. 43 OPTION	1	VIDEO. LEVEL	7
WOOFER GAIN	4	SECAM OPTION	0	FM. LEVEL	16
WOOF OPTION	0	COLOR AUTO	1	CD. MODE	0
SUB. CONT.	31	4. 5 OPTION	0	SOUND TRAP	4
SUB. COLOR	15	5. 5M OPTION	1	R/G GAMMA H. TONE DEF.	1
SUB. SHARP	0	6. 0M OPTION	1	BLUE GAMMA HALF TONE	3
SUB. TINT	32	6. 5M OPTION	1	DIGITAL OSD	0
B. B. BRIGHT20				OSD. CONT	80

MENU11		MENU12		MENU13	
VOL. FILTER	1	VREST TIMING	1	Y GAMMA STA.	0
VIF. SYS. SW	1	G - Y ANGLE	1	DC. REST	3
BRT. ABL. DEF.	0	C. KILLER OPE	3	BLK. STR. STA.	2
MTD. STP. DEF	0	V. BLK. SW	0	BLK. STR. GAIN	2
BRT. ABL. TH	0	FBPBLK. SW	1	A. MONI. SW	0
EMG. ABL. DEF. RGB TEMP SW.	0	WPL OPE.	0	S. TRAP. SW	1
YUV OPTION	0	PRE/OVER ADJ	0	V. LEV. OFFSET	0
FSC. /C - SYNC	1	PRE/OVER SW.	1	OVER. MOD. SW.	0
VCD ADJ. SW.	0	CORING W/DEF	3	OV. MOD. LEVEL	0
C. VCO. ADJ.	1				