


**SERVICE DATA
FILE NO. 050-365
28-SYSTEM**

TOSHIBA COLOUR TELEVISION **2806XH**

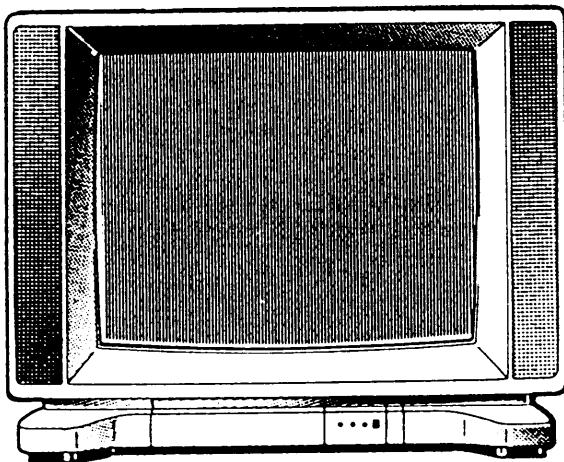

SPECIFICATIONS

| | |
|----------------------------------|---|
| Input Power Rating: | 143 watts (nominal), AC 110~245 volts, 50 / 60 Hz |
| Aerial Input Impedance: | 75 ohm unbalanced type VHF and UHF |
| Receiving Channels: | PAL B / G, SECAM B / G system VHF channels channels 2 to 12 UHF channels channels 21 to 69 PAL D / K, SECAM D / K, K1 system VHF channels channels 1 to 12 UHF channels channels 21 to 69 PAL I system UHF channels channels 21 to 69 NTSC standard (US M, JAPAN M) system VHF channels channels 2 to 13 / 1 to 12 UHF channels channels 14 to 78 / 13 to 62 CATV BAND PAL B/G, SECAM B/G X ~ Z (S1 ~ S3) M1 ~ M10 (S1 ~ S10) U1 ~ U10 (S11 ~ S20) A-6 ~ A-1 A ~ I J ~ W |
| Intermediate Frequencies: | Picture I-F carrier frequency 38.0 MHz Sound I-F carrier frequency 33.5 / 32.5 / 32.0 / 31.5 MHz |
| Picture Tube: | 28 inches, A66KHP96X (66 cm measured on diagonal of viewable picture area), 110° Deflection |
| Sound Output: | Main: 7.0 watts x 2 |
| Speakers: | Main: 70 mm x 130 mm 2 pcs |
| Dimensions: | Height 610 mm Width 770 mm Depth 529 mm |
| Weight: | 37.5 kg |
| Features: | Clearness tube, VIDEO and AUDIO input / output terminals, S-VIDEO input terminals, Surround audio system, Off timer, Remote Control |

Specifications are subject to change without notice.

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" DESCRIBED BELOW.

X-RAY RADIATION PRECAUTION

1. Excessive high voltage can produce potentially hazardous X-RAY RADIATION. To avoid such hazards, the high voltage must not be above the specified limit. The nominal value of the high voltage of this receiver is 30.4kV at zero beam current (minimum brightness) under 110 ~ 245V AC power source. The high voltage must not, under any circumstances, exceed 32kV. Each time a receiver requires servicing, the high voltage should be checked following the HIGH VOLTAGE CHECK procedure in this manual. It is recommended the reading of the high voltage be recorded as a part of the service record. It is important to use an accurate and reliable high voltage meter.
2. The only source of X-RAY RADIATION in this TV receiver is the picture tube. For continued X-RAY RADIATION protection, the replacement tube must be exactly the same type tube as specified in the parts list.
3. Some parts in this receiver have special safety-related characteristics for X-RAY RADIATION protection. For continued safety, parts replacement should be undertaken only after referring to the PRODUCT SAFETY NOTICE below.

SAFETY PRECAUTION

1. Potentials as high as 27kV are present when this receiver is operating. Operation of the receiver outside the cabinet or with back board removed involves a shock hazard from the receiver.
 1. Servicing should not be attempted by anyone who is not thoroughly familiar with the precautions necessary when working on high-voltage equipment.
 2. Always discharge the picture tube anode to the receiver chassis to keep off the shock hazard before removing the anode cap.
 3. Perfectly discharge the high potential of the picture tube before handling the tube. The picture tube is highly evacuated and if broken, glass fragments will be violently expelled.
2. If any Fuse in this TV receiver is blown, replace it with the Fuse specified in the chassis parts list.
3. When replacing parts or circuit boards, wind the lead wires around terminals before soldering.
4. When replacing a high wattage resistor (oxide metal film resistor) in circuit board, keep the resistor 10mm away from circuit board.
5. Keep wires away from high voltage or high temperature components.
6. This receiver can be operated under AC 110 ~ 245 volts, 50/60Hz. NEVER connect to DC supply or any other power.


PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the X-RAY RADIATION protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual and its supplements, electrical components having such features are identified by the international hazard symbols on the schematic diagram and the parts list.


Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create X-RAY RADIATION.

LOCATION OF CONTROLS


■ FRONT

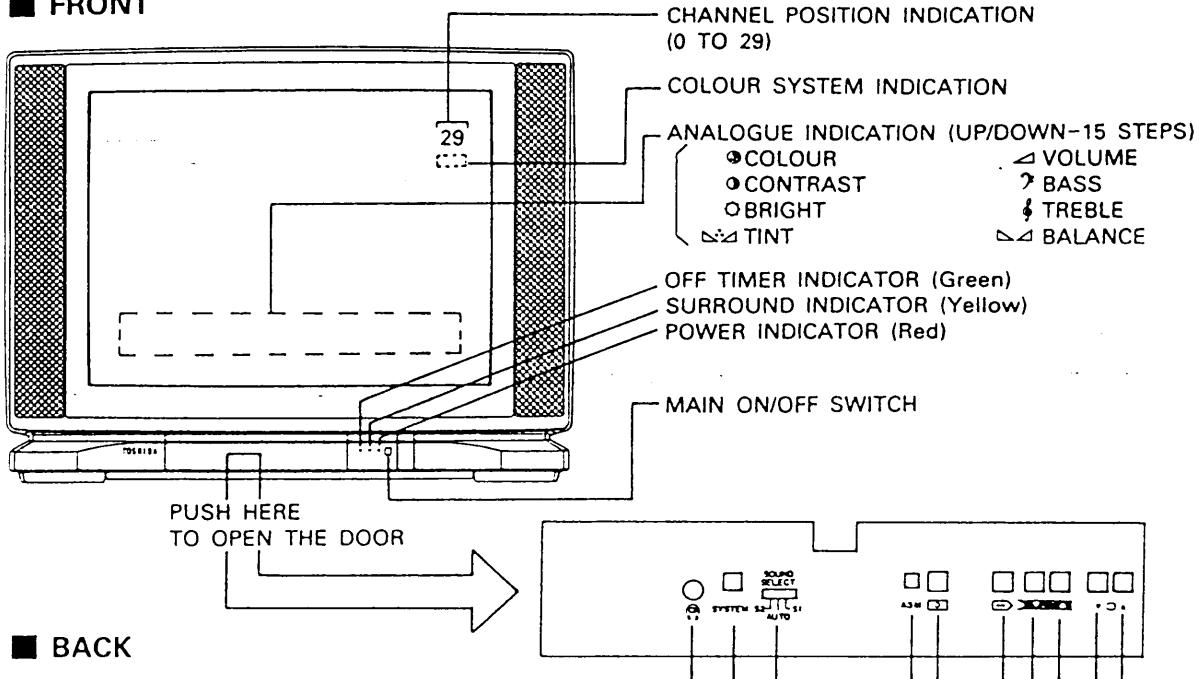

■ BACK

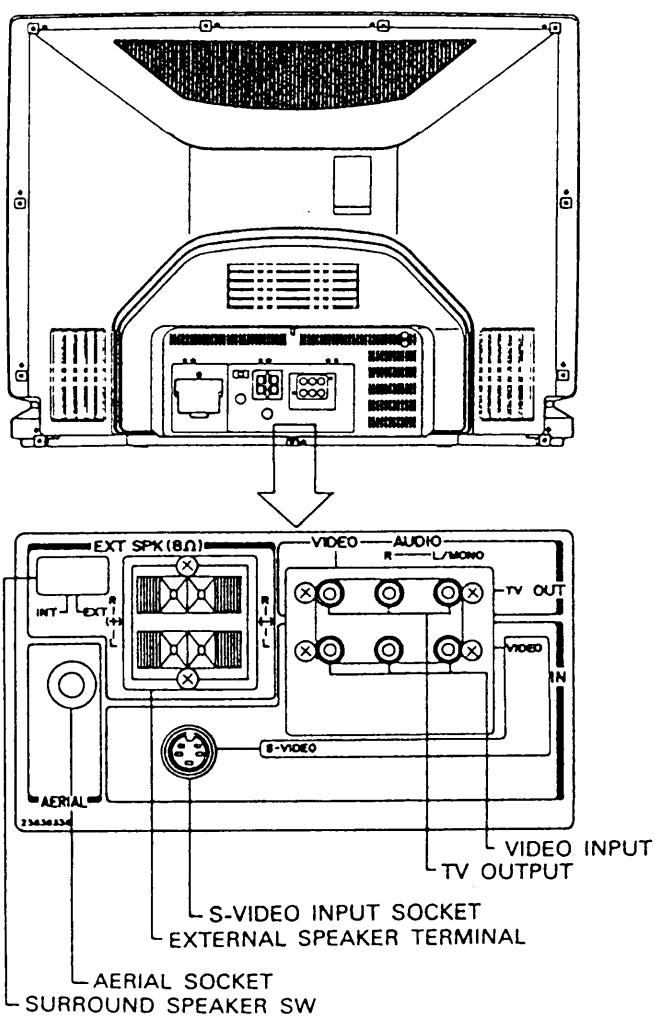

■ REMOTE CONTROL HAND UNIT

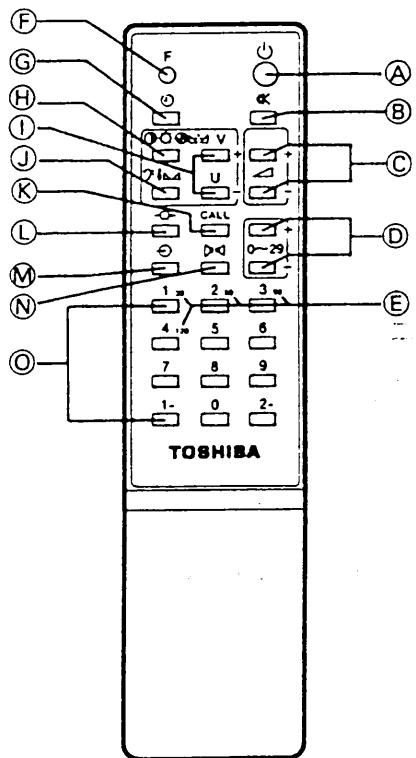

TV PROGRAM RECEPTION

■ WHEN USING REMOTE CONTROL HAND UNIT

■ SET UP


Press the switch: Indicator lamp will be lit and the TV set is ready for viewing.

To turn off the TV: Press the button again.

- Once the MAIN ON/OFF switch is turned on, you can remote-control the TV set.
- If the TV turned off by pressing the MAIN ON/OFF switch on the TV set, it will be turned "on" by pressing the MAIN ON/OFF switch only.


1 The TV set is turned on and off by pressing the ON/OFF button A.

Also it is turned "on" directly by pressing a POSITION button O.

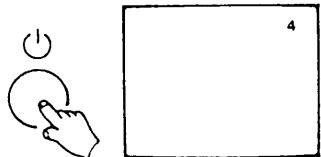


Press the button: The TV set will be turned "on" and the picture of previously viewed channel is seen.

To turn off the TV: Press the button again.

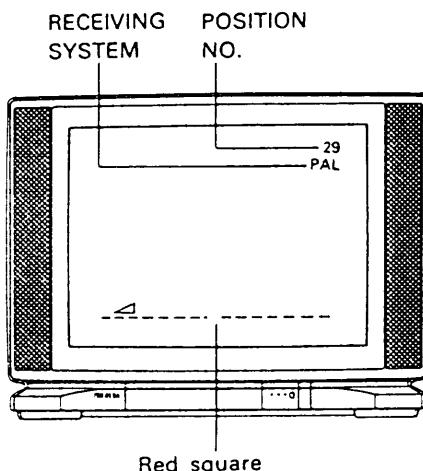


2 Channel is tuned by pressing the CHANNEL buttons D.

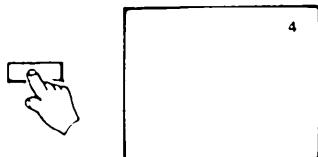


The picture will be changed over, and you will have the position No. displayed on the screen for a few seconds.

- When position No. is in 2 digits (10 to 29), stay pressing 1- or 2- buttons and press the button of the last number.


- Channel change can be performed by CHANNEL buttons D as well.

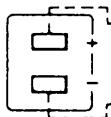


-- Change will take place in the direction from 0 to 29.

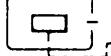

-- Change will take place in the direction from 29 to 0.

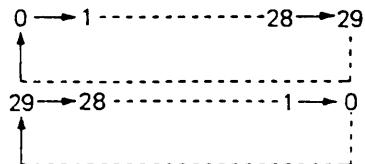

3 Sound volume is adjusted by VOLUME buttons C.

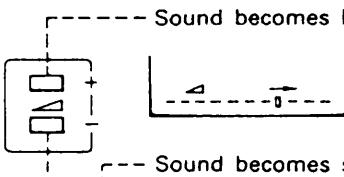

----- Sound becomes larger



----- Sound becomes smaller



----- Red square shifts rightwards, and the sound becomes larger.



----- Red square shifts leftwards, and the sound becomes smaller.

Notes:

- In operating the Remote Control Hand Unit, direct it toward the receiving section of the receiver.
- Even if power is turned off by pressing the POWER button on the Remote Control Hand Unit, a trace of electric current stays flowing in the TV set. If television is not viewed for a long time, turn off the MAIN ON/OFF switch. When going out, take out the power plug from the wall outlet.

■ PICTURE CONTROL


(CONTRAST, BRIGHTNESS, COLOUR, TINT)

To adjust picture for your preference, first select a function by the PICTURE button (H), then adjust the level by the LEVEL buttons (I).

PICTURE CONTROL INDICATION

• FUNCTION SELECT

Press the PICTURE button (H) to select a function to be adjusted among CONTRAST, BRIGHTNESS, COLOUR, TINT. One pressing shifts the function to the next one as shown below.

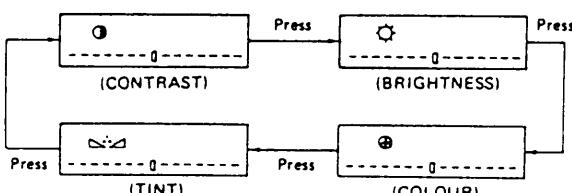

• LEVEL ADJUSTMENT

- After the function selection above, immediately (within 4 seconds) press the ▲ (+) or ▼ (-) button of LEVEL buttons (I).
- Press continuously to shift the level to the next step, and release the button at your preferred picture.
- The LEVEL buttons are effective only during the selected function is displayed.
- Above display will disappear if no additional pressing of CONTROL or LEVEL (▲ / ▼) button is done within 4 seconds.
- The last adjusted value will be stored into memory when LEVEL (▲ / ▼) button is released.
- The RESET (→←) button (L) resets the level corresponding to picture control function (CONTRAST, BRIGHTNESS, COLOUR and TINT) to the value which is previously programmed by customers.
- In order to program the reset value, press the MEMORY (○) button (4) after adjusting each function.
- Adjustment steps and indication:

Each function can be adjusted with 64 steps and its approx. adjusted value is displayed with 15 steps.

| | FUNCTION | CONTROL DOWN ▼ Button (The red square moves left) | CONTROL UP ▲ Button (The red square moves right) |
|------------------------------|------------|--|---|
| PICTURE CONTROL Button | CONTRAST | Weak | Strong |
| | BRIGHTNESS | Dark | Light |
| | COLOUR | Pale | Deep |
| | TINT | Purplish | Greenish |

■ SOUND CONTROL

(BASS, TREBLE, BALANCE)


To adjust sound for your preference, first select a function by the SOUND button (J), then adjust the level by the LEVEL buttons (I).

SOUND CONTROL INDICATION

• FUNCTION SELECT

Press the SOUND button (J) to select a function to be adjusted among BASS, TREBLE and BALANCE.

One pressing shifts the function to the next one as shown below.

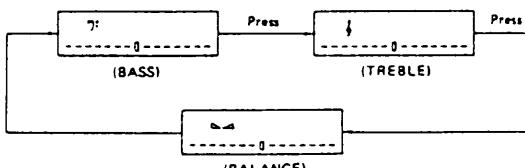

• LEVEL ADJUSTMENT

- After the function selection above, immediately (within 4 seconds) press the ▲ (+) or ▼ (-) button of LEVEL buttons (I).
- Press continuously to shift the level to the next step, and release the button at your preferred sound.
- The LEVEL buttons are effective only during the selected function is displayed.
- Above display will disappear if no additional pressing of CONTROL or LEVEL (▲ / ▼) button is done within 4 seconds.
- The last adjusted value will be stored into memory when LEVEL (▲ / ▼) button is released.
- Adjustment steps and indication:

Each function can be adjusted with 64 steps and its adjusted approx. value is displayed with 15 steps.

| | FUNCTION | CONTROL DOWN ▼ Button (The red square moves left) | CONTROL UP ▲ Button (The red square moves right) |
|----------------------------|----------|--|---|
| SOUND CONTROL Button | BASS | Low tones are weakened | Low tones are enhanced |
| | TREBLE | High tones are weakened | High tones are enhanced |
| | BALANCE | Lowers sound from the right speaker | Lowers sound from the left speaker |

■ CALL SWITCH button


- The display and erasure will alternate each time the CALL button (K) is pressed.

Channel number

- Is displayed in position Nos. from 0 to 29.
The receiving system at the time is also displayed.

Video

- In video mode, display is made either by 1
The receiving system at the time is also displayed.

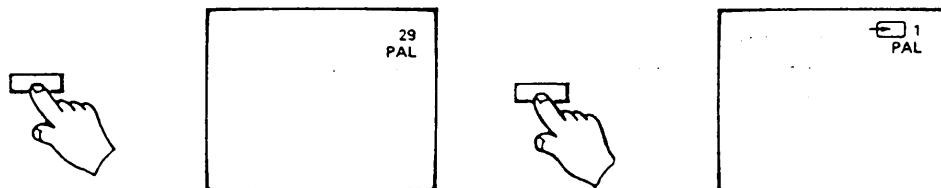

■ MUTE

- The sound mute and restoration will alternate each time the MUTE button (B) is pressed.
- This feature is useful:

During phone call.



Be silent!




When receiving a visitor.



- The muting will be cancelled by pressing either POWER, CHANNEL, VOLUME, VIDEO, SURROUND LEVEL, SEARCH, ASM or SYSTEM button.

■ TV/VIDEO SW

- Each time the video button (M) is pressed, selection will be changed over in sequence.
- The VIDEO button on the TV set operates in the same way.

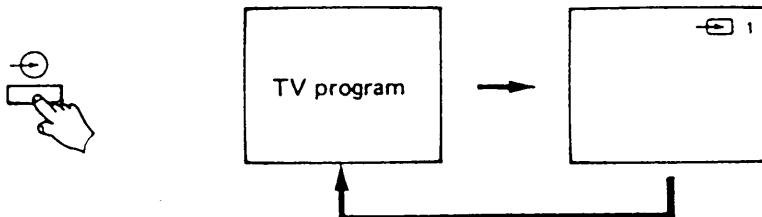


- If you press the CHANNEL button (0 to 29), the channel is changed over to the selected one.

■ SIMPLIFIED SURROUND

Press the SURROUND button (N).

The effect of spreading sound is turned on by pressing this button.

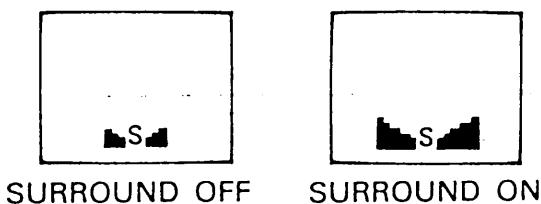


■ OFF TIMER

This feature allows you to set the TV to turn off automatically after elaspe of a time which you can reserve in 4 patterns: after 30, 60, 90 and 120 minutes.


Example

Set to OFF 60

1 Press the OFF TIMER button (G).

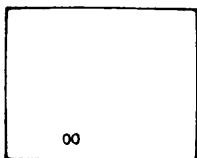

2 Press the TIME SELECT button (E).

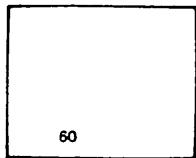

NOTE: If the power is turned off, the setting will be cancelled.

To change the time reservation.

Press the OFF TIMER button (G), and then press the TIME SELECT button (E) to set the time to which the change has been made.

To cancel the reservation.

Press the OFF TIMER button (G), and then press the RESET button (L).

If you want to know the time remaining.

Press the OFF TIMER button (G) to have the remaining time displayed on the screen.

■ V/U SEARCH

For example: The channel 3 on the position 3

(1) Select the position 3 with the DIRECT POSITION buttons (G) on the remote hand unit or the CHANNEL UP/DOWN buttons (I) on the TV.

(2) Press together the "F" (F) and "V" buttons (I) on the remote hand unit.
Search begins on the channel 3.

(3) Press repeatedly the "F" (F) and "V" buttons (I) until the desired position 3 is received on the screen.

(4) When you desire to memorize the UHF channels, in the above procedure, press the "F" (F) and "U" buttons (I) together.

(5) During the search operation, "">>>>" is indicated with flickering in 0.2 seconds interval.
When the search reaches to the lowest frequency of TV VHF/UHF band, the search stops and "">>>>" will be indicated continuously (not flickering).
In this case, press the "F" (F) and "V" buttons (I) or the "F" (F) and "U" buttons (I) again to restart the search operation.

TV PROGRAM RECEPTION

■ CONTROLLING THE TV SET PROPER



- In case the Remote Control Hand Unit is not near at hand, or batteries have been used up, you can control the TV on the receiver proper.

1 The TV set is turned on and off by operating the MAIN ON/OFF switch.


Press it: The TV set is turned on.
To turn off: Press the switch again.

Note: When the TV set is not turned on with the MAIN ON/OFF switch pressed, press the VOLUME buttons ② or the CHANNEL buttons ①.

2 Channel is tuned by the CHANNEL buttons (behind the door)

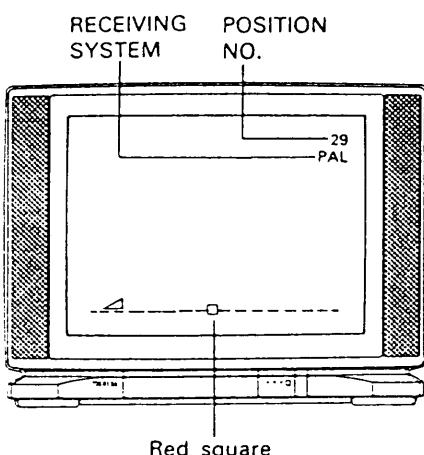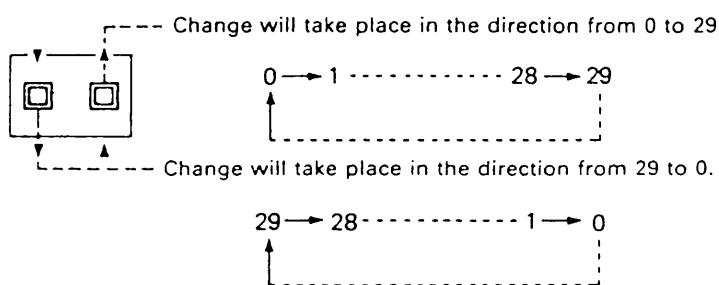

3 Sound volume is adjusted by VOLUME buttons (behind the door)

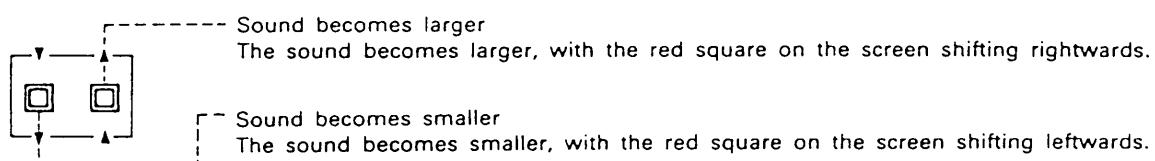


■ FINE TUNING

If the receiving condition in your area is poor, the detuning adjustment may be recommended for better viewing with the FINE TUNING button.

Note: In the fine tuning mode, receiving picture may deviate slightly, because the automatic frequency control is deactivated.
At that time, readjust the fine tuning to correct the deviation.

- Press the MFT (Manual Fine Tuning) button ③ on the TV.
"000" is indicated under the position number display.

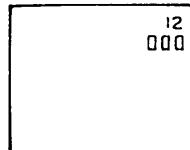

- Press the VOLUME UP/DOWN buttons ② ④ to adjust the picture for better one.


- The fine tuning mode is released with the POSITION button, TV/VIDEO button or POWER ON/OFF button pressed.

■ TO MEMORIZE ALL CHANNELS IN SEQUENCE AUTOMATICALLY

ASM: Free position Auto Search Memory

For example, to memorize channels from the position 1 automatically:

1. Select the position 1 with the DIRECT POSITION buttons ⑩ on remote hand unit or the CHANNEL UP/DOWN buttons ⑪ ⑫ on TV receiver.
2. Press once the AUTO SEARCH MEMORY button ⑤ on the TV, and all active channels (stations) in your area are automatically memorized on the positions from smaller number to larger one in sequence.
During the operation of AUTO SEARCH MEMORY, "">>>>" are indicated with flickering in 0.2 seconds interval.

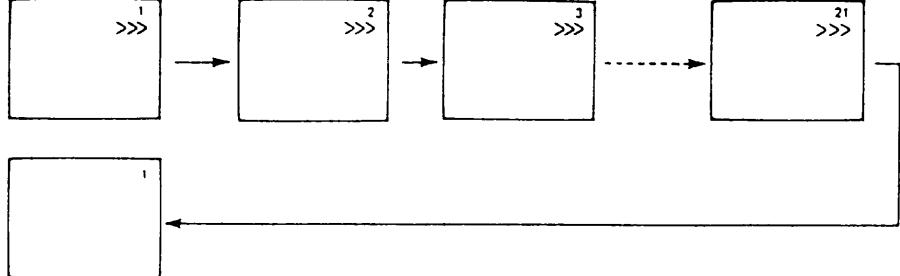

3. After all channels are memorized, the search goes to the position 20 and returns to the position 1 to end the operation.
4. When you desire to memorize the same contents to the position 21 and larger, select the position 21 and press the AUTO SEARCH MEMORY button ⑤ again. After the channels are memorized, the search goes to the position 29 and returns to the position 21 to end the operation.

This TV receiver can memorize 30 channels of station on the desired position number, 3 ways of channel memorization are prepared; namely ASM, U/V SEARCH and MFT.

■ SOUND SELECT

When disturbance occurs in reception of sound multi broadcast (NICAM SYSTEM), SOUND SELECT SW shall be set to S1 or S2 side.

However the other system shall be set to AUTO side.

■ RECEIVING SYSTEM

SYSTEM SWITCH ⑦ OPERATION

AUTO → PAL → SECAM → 443NTSC → 358NTSC



This TV receiver can receive 28 systems.

- AUTO All signals of 28 systems can be received.
- PAL PAL Signal can be received.
- SECAM SECAM Signal can be received.
- 4.43NTSC Signal from VCR on 4.43NTSC can be received.
- 3.58NTSC 3.58NTSC signal can be received. U.S. CHANNEL, JAPAN CHANNEL (PHILIPPINES, KOREA)

Note:

Colour system indication is displayed in green when the TV is switched on automatic mode and in cyanic when switched on manual mode.

■ COUNTERMEASURES AGAINST MALFUNCTION IN FRINGE AREA

1. In Case Abnormal Signals Were Memorized by Auto Search

If you mind this, reset the memory by MFT ③ (Manual Fine Tuning) from the position after the one where the abnormal signals were memorized.

2. System Selection When System Malfunction Occurs

System malfunction may occur in AUTO mode when unfavourable receiving conditions prevail. In this event, use manual mode which matches the system of receiving signals.


Example:

- (1) In the case of receiving successive channels.
- (2) In using video tape reproduced repeatedly.
- (3) When receiving different systems in the vicinity of border where receiving conditions are bad.
- (4) In the area where strong and weak electric fields are mixed in the channels.

EXTERNAL EQUIPMENT CONNECTION (VCR)

① TO CONNECT VCR FOR PICTURE RECORDING AND PLAY-BACK

HOW TO CONNECT VCR

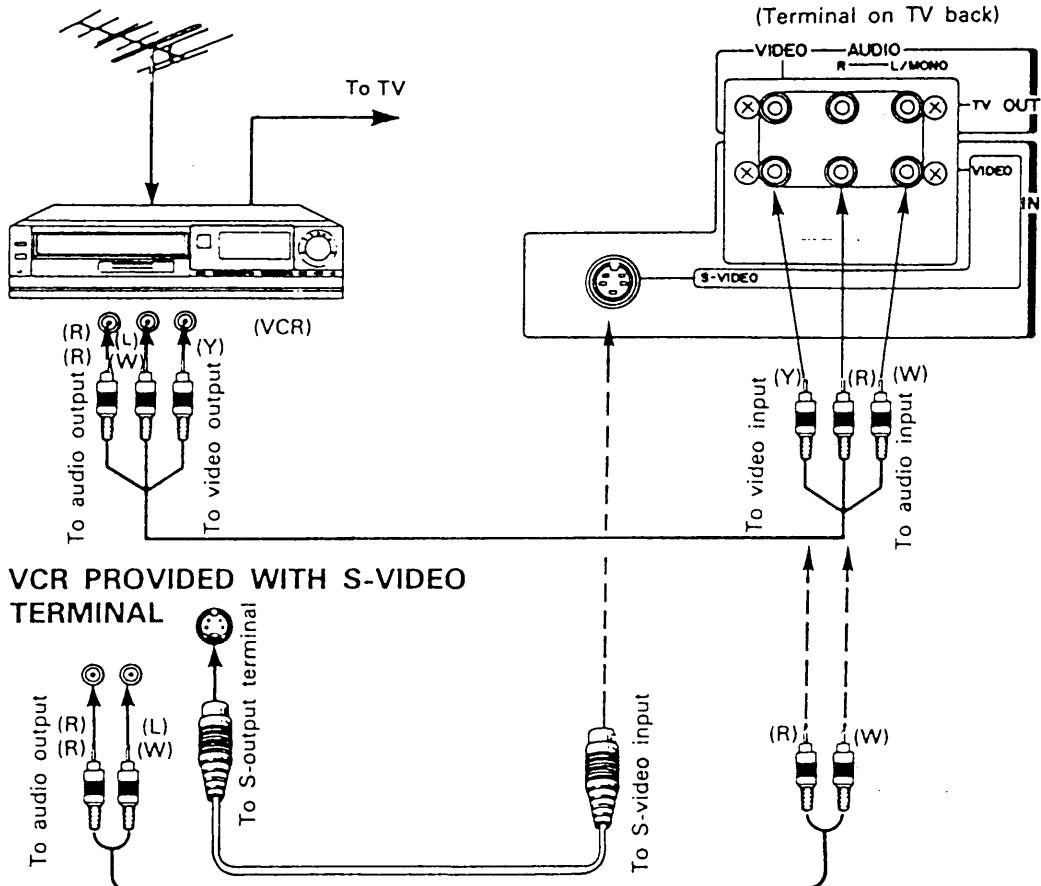

HOW TO USE

| When recording | When playing back |
|--|---|
| <ol style="list-style-type: none"> Select the TV program to be recorded on the side of VCR to put it in the recording position. To monitor the recording condition, put the TV set in "VIDEO" mode by pressing VIDEO button on the TV. | <ol style="list-style-type: none"> Get into "VIDEO" mode by pressing VIDEO button on the TV set. Set VCR in the play-back position. Note: To view a TV program after play-back, put it in the "TV" position by pressing the TV/VIDEO button. |
| To record background TV program | |
| <ol style="list-style-type: none"> Set the VCR in the recording position by taking the steps as mentioned in the above "When recording." Press the TV/VIDEO SELECTION button of VCR to put it into "TV" mode. You may view TV program as you like by pressing CHANNEL button of the TV. | |

NOTE:



- Be sure to read the "Operation Manual" of the VCR you use as well.
- It is operable also with the video input terminal.
- When viewing TV program with the connection exemplified above (connection through VCR to antenna lead-in), turn off the power of VCR or press TV/VIDEO button to get into the "TV" mode.
- S-video terminal is a separate TC signal terminal.
- Do not use the video terminal concurrently with the S-video input terminal.
Use audio terminal of the video mode terminals.

(Stereo & Video Camera)

2 WHEN CONNECTING STEREO UNIT

Example: When using TV output terminal

- Sound volume is controlled in the side of stereo unit.
(Useful when recording.)

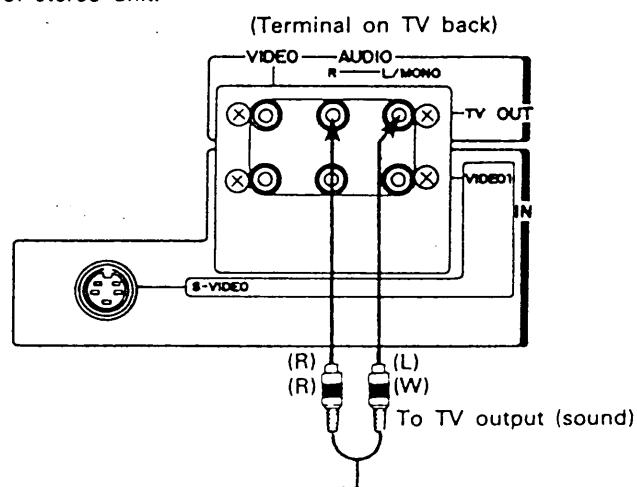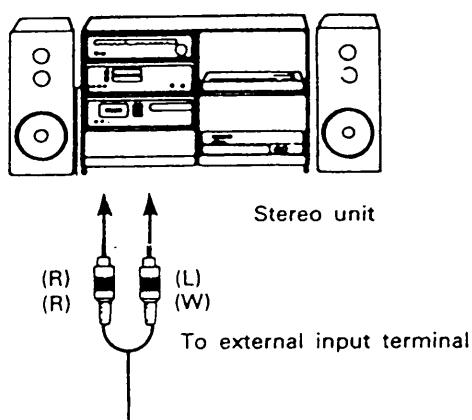



HOW TO USE

- 1 Mute the sound of TV speaker.
- 2 Sound volume should be adjusted in the stereo side.

NOTE:

- To avoid machine trouble, never use a set of speakers commonly for TV and stereo unit.
- Please read the "Operation Manual" of the stereo unit you use as well.

3 IF VIDEO CAMERA IS CONNECTED FOR PLAY-BACK

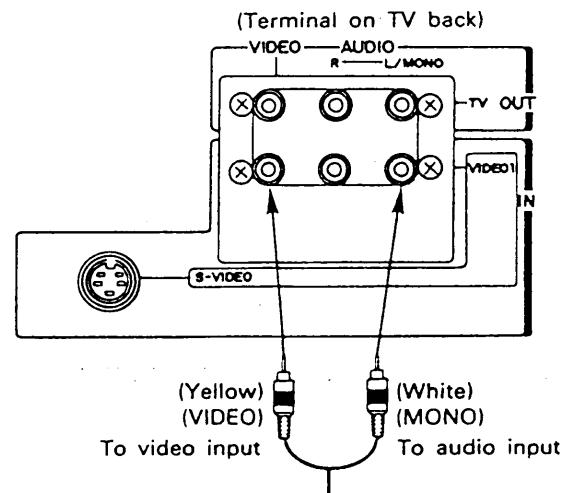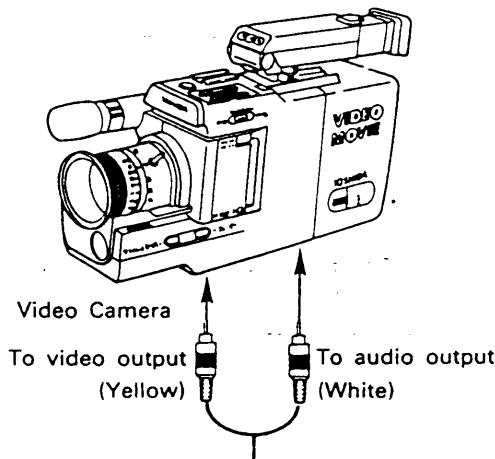

HOW TO USE

When playing back

- 1 Press VIDEO button of either TV or Remote Control Hand Unit to put the set in "VIDEO" mode.
- 2 Set the VCR in the play-back position.


NOTE:

- In case audio output of the VCR is monaural, connect to Left/Mono terminal.
- If a speaker is placed on the TV, unevenness of colour may result. In this event, put it away from the TV set.


EXTERNAL EQUIPMENT CONNECTION (EXTERNAL SPEAKERS)

4 CONNECTING EXTERNAL SPEAKERS

Before connecting the external speakers, turn the TV set off.

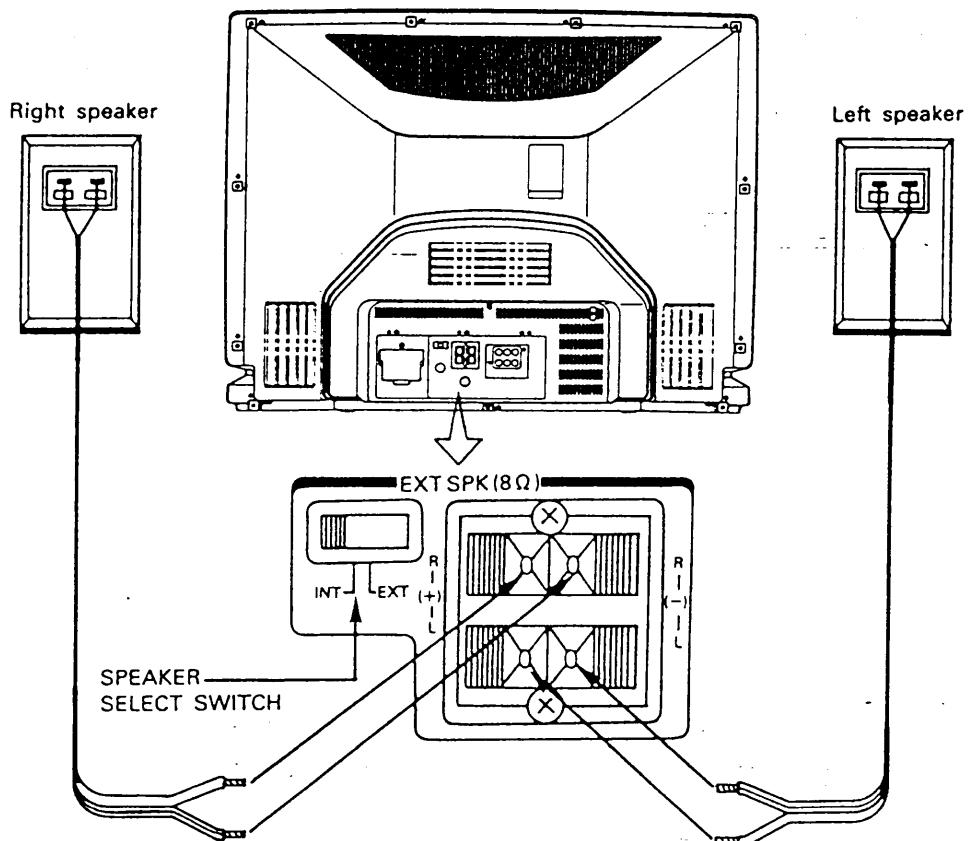

1 Connect speaker leads

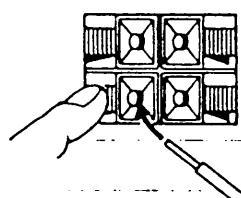

While pressing the button, insert the wire into the hole, then release the button.
Pull firmly on the connection to make sure it is secure.
Make sure connection of the wire is proper (R-L and $(+)$ $(-)$).


2 Set the SPEAKER SELECT Switch



Switch it to "EXT" side (right).
The built-in speaker sound is disconnected.

NOTE:


- Do not connect two sound sources to the same speaker system.
This may damage the TV. See the right figure.
- Use only external speakers with an impedance rating of 8 ohms and input power 7 watts or more.

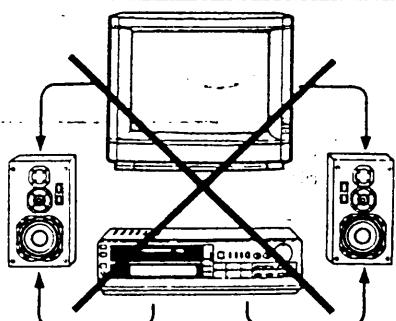

5 USE OF HEADPHONE

For private listening, connect a headphone (optional) to the HEADPHONE jack.
The sound from the speakers will be cut off automatically.

(Behind the door)

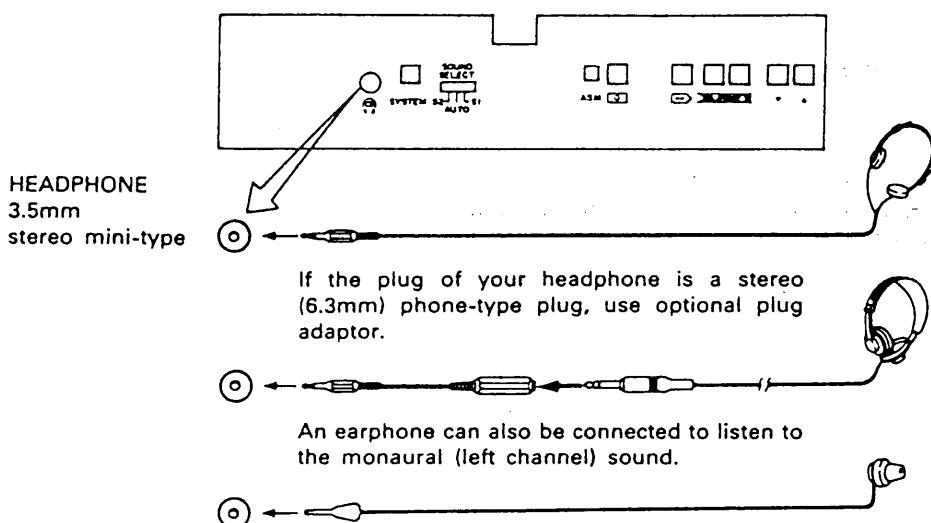


6 OPTIONAL ACCESSORIES

OPTIONAL ACCESSORIES ARE AVAILABLE FOR VARIOUS COMBINATION OF EXTERNAL EQUIPMENT CONNECTIONS.


- When connecting video/audio equipment to this TV set, you can choose the optional parts as shown below.

CONNECTING CORD


For audio
(stereo)

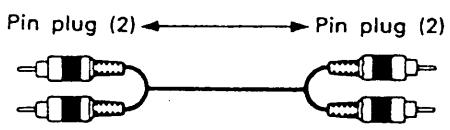

For video/audio
(monaural)

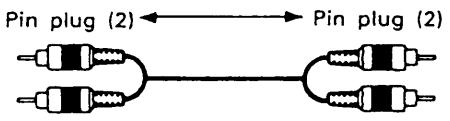

For video/audio
(stereo)

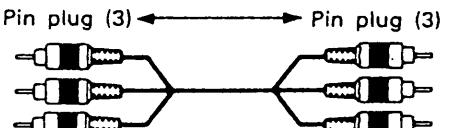

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

INSTALLATION AND SERVICE ADJUSTMENTS

GENERAL INFORMATION

All adjustments are thoroughly checked and corrected when the receiver leaves the factory. Therefore the receiver should operate normally and produce proper colour and B/W pictures upon installation. However, several minor adjustments may be required depending on the particular location in which the receiver is operated.

This receiver is shipped completely in cardboard carton. Carefully draw out the receiver from the carton and remove all packing materials. Plug the power cord into a convenient 110 ~ 245 volts 50/60Hz AC two pin power outlet.

Turn the receiver ON and adjust the FINE TUNING for best picture detail with the AFC turned OFF.

Check and adjust all the customer controls such as BRIGHTNESS, CONTRAST and COLOUR Controls to obtain natural colour or B/W picture.

AUTOMATIC DEGAUSSING

A degaussing coil is mounted around the picture tube so that external degaussing after moving the receiver is normally unnecessary, providing the receiver is properly degaussed upon installation. The degaussing coil operates for about 1 second after the power to the receiver is switched ON. If the set is moved or faced in a different direction, the power switch must be switched off at least one hour in order that the automatic degaussing circuit operates properly.

Should the chassis or parts of the cabinet become magnetized to cause poor colour purity, use an external degaussing coil. Slowly move the degaussing coil around the faceplate of the picture tube, the sides and front of the receiver and slowly withdraw the coil to a distance of about 2 m before disconnecting it from AC source. If colour shading still persists, perform the COLOUR PURITY ADJUST-MENT and CONVERGENCE ADJUSTMENTS procedures, as mentioned later.

+ 145 VOLT POWER SUPPLY ADJUSTMENT (R851)

CAUTION: +B voltage closely relates to the high voltage.

To prevent hazardous X-RAY RADIATION, the +B voltage must be properly adjusted to +145 volts.

1. Tune in an active channel. Adjust the BRIGHTNESS and CONTRAST Controls for normal picture.
2. Check that the AC power Line voltage is normal. (AC 220 volts, 50 Hz)
3. Connect a VTVM between L805 on POWER Board and chassis ground.
4. Adjust the +B ADJ. (R851) on POWER Board for +145 volts reading. Remove the VTVM.

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis.

1. Connect an accurate high voltage meter to the second anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST Controls to minimum (zero beam current).
3. High voltage will be measured below 32kV.
4. Rotate the BRIGHTNESS Control to both extremes to be sure the high voltage does not exceed the limit of 32kV under any conditions.

HEIGHT ADJUSTMENT

HEIGHT Control (R351) on Back Terminal Board changes the size of the picture or pattern, having an equal effect on the top and bottom. Make final adjustment to overscan the mask 2 cm at top and bottom.

FOCUS ADJUSTMENT

Adjust FOCUS Control on FLYBACK TRANS.(T461) for well defined scanning lines in the centre area on the screen.

HORIZONTAL CENTER ADJUSTMENT

1. Receive the WG PHILIPS pattern.
2. Set the contrast and colour to minimum, and the brightness to maximum.
3. Adjust H. CENTER Control (R451) so the pattern center can be located at the screen center.

-PICTURE WIDTH AND DISTORTION ADJUSTMENT (Width, Pincusion Distortion, Trapezoid Distortion)

1. Perform this adjustment after +B and H. CENTER adjustment are completed.
2. Receive the WG PHILIPS pattern.
3. Set the contrast and colour to minimum, and the brightness to maximum.
4. Adjust H. WIDTH Control (RD50) for the horizontal width so that the white flags on left and right of the pattern are just hidden.
5. Adjust DPC Control (RD51) to correct the vertical line on left and right straight.
6. Readjust WIDTH Control (RD50) for the precision.

BELL COIL (LM01) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Connect the synchroscope to the terminal Pin 2 of LM01.
3. Adjust LM01 for the flat level of amplitude in each colour bar waveform on the scope. (See figure 1.)

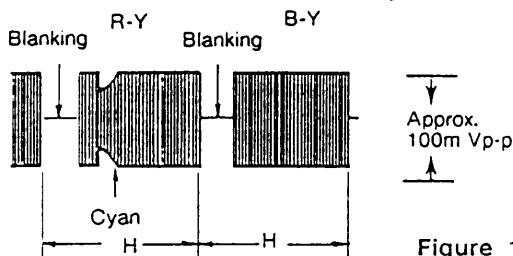


Figure 1.

IDENT COIL (LM04) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Connect the DC voltmeter (Digital Voltmeter) to the pin 23 of IC501.
3. Adjust LM04 for the maximum indication (approx. DC10V) on the meter.

B-Y, R-Y DEMOD COIL (LM02, LM03) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Set the COLOUR, BRIGHTNESS and CONTRAST Controls free.
3. Connect the synchroscope to the pin 62 of IC501.
4. Adjust LM02 so that the white level in picture part reaches to the vertical retrace line. (See figure 2.)
5. Then change the connection of synchroscope from the pin 62 to the pin 60 of IC501.
6. Adjust LM03 so that the white level in picture part reaches to the vertical retrace line. (See figure 3.)

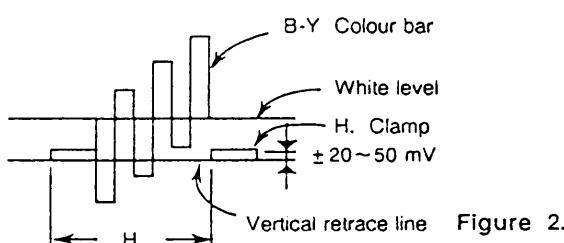


Figure 2.

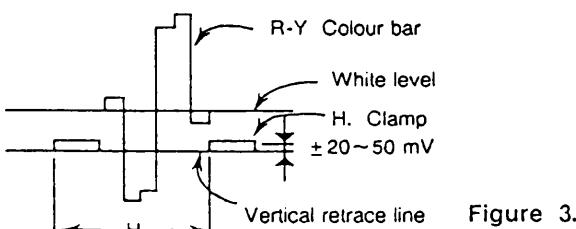


Figure 3.

PAL MATRIX ADJUSTMENT

1. Tune in the colour programme PAL Philips pattern.
2. Set the COLOUR Control VR. to obtain the proper colour.
3. If the PAL MATRIX adjustment is in correct, the venetian Blind would appear in the colour bars area. The case needs the adjustment.
4. At the first, adjust DL PHASE ADJ. Coil (L551) to minimize the Venetian Blind.
5. Next adjust 1H-DL ADJ. VR (R551) to minimize the Blind.
6. Remove the capacitor, and if the Venetian Blind still remains, adjust 1H-DL PHASE ADJ. Coil (L551) to minimize the Blind again.
7. Repeat the item 5 and 6 procedures, adjust the R551 and L551 until the Blind does not appear when the capacitor is connected.

SIF DET. ADJUSTMENT L674 FOR 6.0MHz

1. Supply +12V to the System Switch Board.
2. Connect 10k ohm resistor between pin 18 of IC670 and ground.
3. Connect the 6.0MHz signal (Modulation: 400Hz/15kHz deviation, 100dB μ) of SIF S.G. to pin 9 of IC670 through a capacitor 0.01 μ F.
4. Connect the millivoltmeter to pin 9 of IC674.
5. Adjust L674 for the maximum reading on the meter.

C651 FOR 4.5MHz

1. Supply +12V to the System Switch Board.
2. Connect 10k ohm resistor between pins 18 and 22 of IC670.
3. Connect the 4.5MHz signal (Modulation: 400Hz/ 7.5kHz deviation, 100dB μ) of SIF S.G. to pin 25 of IC670 through a capacitor 0.01 μ F.
4. Connect the millivoltmeter to pin 9 of IC674.
5. Adjust the variable capacitor (C651) for the maximum reading on the meter.

SIF DET. ADJUSTMENT 6.0MHz OSC. COIL (L672)

1. Supply +12V to the System SW. Board.
2. Connect 10k ohm resistor between pin 18 of IC670 and ground.
3. Apply the 6.0MHz signal (No modulation, 100dB μ) of SIF S.G. to Base of QN40 through a capacitor 0.01 μ F.
4. Connect oscilloscope to pin 9 of IC674.
5. Adjust L672 so that the response on oscilloscope can be maximum.

SIF DET. ADJUSTMENT 5.5MHz OSC. COIL (L671)

1. Supply +12V to the SYSTEM SW. Board.
2. Supply +9V to Anode of D402 through 10k ohm resistor.
3. Apply the 5.5MHz signal (No modulation, 100dB μ) of SIF S.G. to pin 27 of IC670 through a capacitor 0.01 μ F.
4. Connect oscilloscope or DC voltmeter to pin 18 of IC670.
5. Adjust L671 so that the response on oscilloscope or DC voltmeter can become +4.5V.

COLOUR PURITY ADJUSTMENT

Note : Before attempting any purity adjustments, the receiver should be operated for at least fifteen minutes. Purity adjustment requires Rubber Wedge kit.

1. Demagnetize the picture tube and cabinet using a degaussing coil.
2. Turn the CONTRAST and BRIGHTNESS Controls to maximum.
3. Adjust RED and BLUE CUT OFF controls (R557 and R559) to provide only a green raster. Advance the GREEN CUT OFF control (R558) if necessary.
4. Loosen the clamp screw holding the yoke, and slide the yoke backward or forward to provide vertical green belt (zone) in the picture screen.
5. Remove the Rubber Wedges.
6. Rotate and spread the tabs of the purity magnet (See figure 5) around the neck of the picture tube until a green belt is obtained in the centre of the screen. And at the same time, centre the raster vertically by adjusting the magnet.
7. Move the yoke slowly forward or backward until a uniform green screen is obtained. Tighten the clamp screw.
8. Check the purity of the red and blue raster by adjusting the CUT OFF Controls.
9. Tighten the clamp screw of the yoke temporarily.
10. Obtain a white raster; referring to "CRT GREY SCALE ADJUSTMENT".
11. Proceed with convergence adjustment.

CRT GREY SCALE ADJUSTMENT

1. Tune in an active channel.
2. Turn the SCREEN Control (on T461) fully counter-clockwise.
3. Set the RED, GREEN and BLUE CUT OFF Controls (R557, R558, R559) to the mid position.
4. Set the GREEN and BLUE DRIVE Controls (R252, R253) to the mid position.
5. Set the SERVICE SW. (S202) in the H. line position.
6. Set the CONTRAST, COLOUR Controls to minimum and BRIGHTNESS Control to centre position.
7. Rotate the SCREEN Control gradually clockwise until the first line appears slightly on the screen.
Then turn fully counterclockwise the two CUT OFF Controls corresponding to the colours of the first and the second horizontal lines to eliminate the lines.
8. Rotate the SCREEN Control gradually clockwise until the first horizontal line of a colour (RED, GREEN or BLUE) appears slightly on the screen.
Set the SCREEN Control to this position.
At the base of the colour, rotate the remaining two CUT OFF Controls gradually clockwise until the horizontal lines of each colour appear slightly on the screen.
9. Adjust the CUT OFF Controls to obtain the slightly lighted horizontal lines in the same levels of three colours (RED, GREEN and BLUE).
The lines may look like white if the CUT OFF Controls are adjusted properly.
10. Return the SERVICE SW. (S202) in the Receiving position.
11. Set the BRIGHTNESS Control to the maximum and COLOUR control to the minimum.
12. Adjust the BLUE and GREEN DRIVE Controls (R252/ R253) to obtain proper white-balanced picture in high light areas.
13. Set the BRIGHTNESS and CONTRAST Controls to obtain dark grey raster. Then check the white balance in low brightness. If the white balance is not proper, retouch the CUT OFF Controls and DRIVE Controls to obtain a good white balance in both low and high light areas.

SUB-BRIGHTNESS ADJUSTMENT

1. Tune in a colour programme.
2. Set the CONTRAST Control to the maximum and the BRIGHTNESS Control to the centre.
3. Set the COLOUR Control to the centre.
4. Set the SUB-BRIGHT. Control (R255) to the centre and leave the receiver for five minutes in this state.
5. Watching the picture well, adjust the SUB-BRIGHT. Control in the position where the picture does not show evidence of blooming in high bright area and not appear too dark in low bright portion.
6. Check the proper picture variation by rotating the CONTRAST and BRIGHTNESS Controls to both extremes.
7. If the picture does not appear dark with the CONTRAST and BRIGHTNESS Controls turned to the minimum, or not appear bright with the controls turned to the maximum, adjust the SUB-BRIGHT. Control again for the acceptable picture.

CONVERGENCE ADJUSTMENTS

Note : Before attempting any convergence adjustments, the receiver should be operated for at least fifteen minutes.

■ Centre Convergence Adjustment

1. Receive crosshatch pattern with a colour bar signal generator.
2. Adjust the BRIGHTNESS and CONTRAST Controls for well defined pattern.
3. Adjust two tabs of the 4-Pole Magnets to change the angle between them (See figure 5.) and superimpose red and blue vertical lines in the centre area of the picture screen. (See figure 6.)
4. Turn the both tabs at the same time keeping the constant angle to superimpose red and blue horizontal lines at the centre of the screen. (See figure 6.)
5. Adjust two tabs of 6-Pole Magnets to superimpose red/blue line and green one. Adjusting the angle affects the vertical lines and rotating both magnets affects the horizontal lines.
6. Repeat adjustments 3, 4, 5 with understanding red, green and blue movement, because 4-Pole Magnets and 6-Pole Magnets have mutual affection and it makes dots movement complex.

■ Circumference Convergence Adjustment

1. Loosen the clamping screw of deflection yoke to allow the yoke to tilt.
2. Put a wedge as shown in figure 4. temporally. (Do not remove cover paper on adhesive part of the wedge.)
3. Tilt front of the deflection yoke up or down to obtain better convergence in circumference. (See figure 6.) Push the mounted wedge into the space between picture tube and yoke to fix the yoke temporarily.
4. Put other wedge into bottom space and remove the cover paper to stick.
5. Tilt front of the yoke right or left to obtain better convergence in circumference. (See figure 6.)
6. Keep the yoke position and put another wedge in either upper space. Remove cover paper and stick the wedge on picture tube to fix the yoke.
7. Detach the temporarily mounted wedge and put it in another upper space. Stick it on picture tube to fix the yoke.
8. After fixing three wedges, recheck overall convergence. Tighten the screw firmly to fix the yoke and check the yoke is firm.
9. Stick 3 adhesive tapes on wedges.


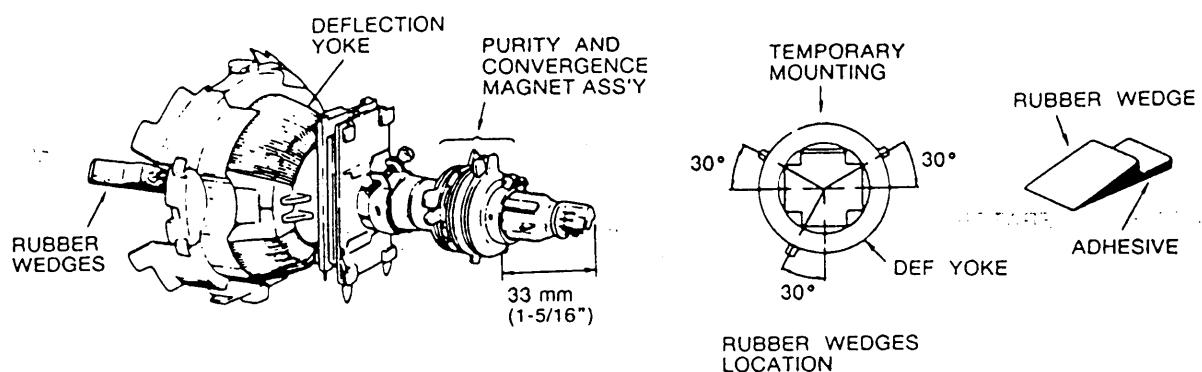



Figure 4.

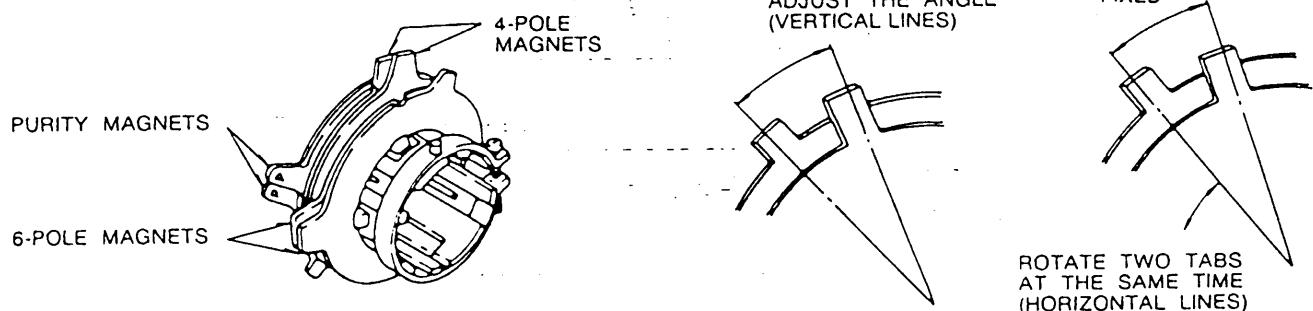


CONVERGENCE MAGNET ASSEMBLY

ADJUSTMENT OF MAGNETS

Figure 5.

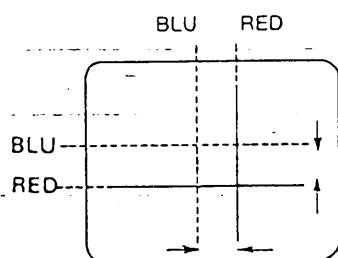


4-POLE MAGNETS MOVEMENT

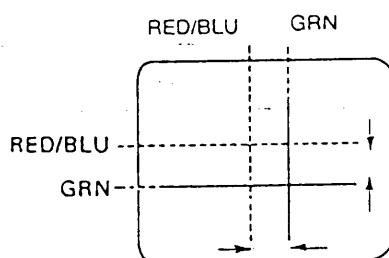


6-POLE MAGNETS MOVEMENT

Center Convergence by Convergence Magnets

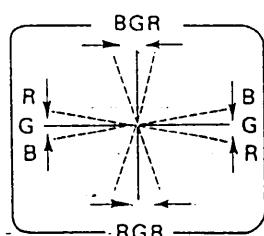

INCLINE THE YOKE UP (OR DOWN)

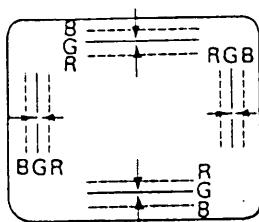

INCLINE THE YOKE RIGHT (OR LEFT)

Circumference Convergence by DEF Yoke

Figure 6. Dot Movement Pattern.

PICTURE I-F TRAP ALIGNMENT

GENERAL Refer to Figure 7 for the equipment connection.
 PRELIMINARY STEPS 1. Disconnect the jumper wire (on the tuner IF output line) on the component side of the MAIN Board.
 2. Supply + 12 volts to the MAIN Board.
 SWEEP/MARKER GENERATOR Connect to the point ④ as shown in Figure 7 on the MAIN Board.
 OSCILLOSCOPE Connect through the detector (See Figure 9.) to the emitter of Q181 on the System SW board.

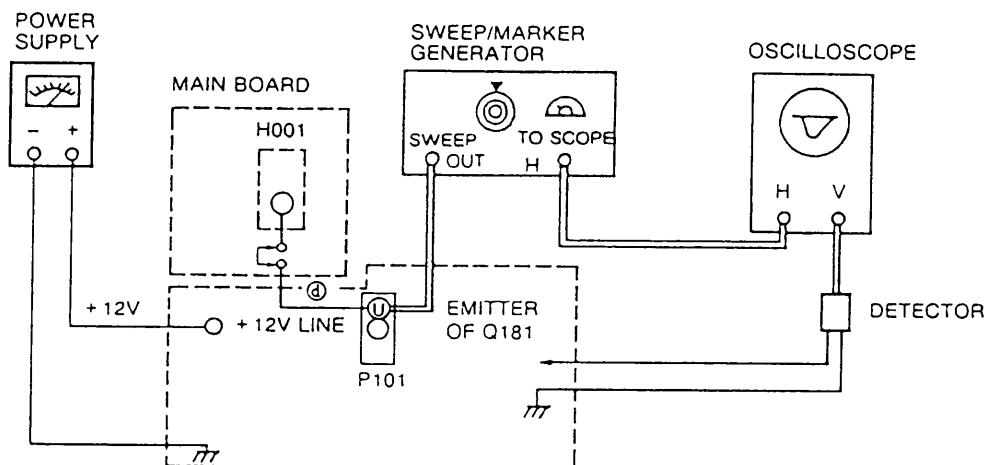


Figure 7. I-F TRAP Alignment

| STEP | SWEEP/MARKER GENERATOR | ADJUST | PROCEDURE |
|---|------------------------|--------|--|
| T181 33.5 MHz/T182 32.0 MHz TRAP ALIGNMENT Control the sweep output for easy alignment. Set the system SW to 3.58 NTSC system. | | | |
| 4.5 MHz Trap Coil | 33.5MHz Marker "ON" | T181 | <ul style="list-style-type: none"> Set the IF Marker for 33.5 MHz (P-4.5M) Adjust T181 so that 33.5 MHz marker point is placed at bottom of response. (See Figure 8) |
| 6.0 MHz Trap Coil | 32.0MHz Marker "ON" | T182 | <ul style="list-style-type: none"> Set the IF Marker for 32.0 MHz (P-6.0M) Adjust T182 so that 32.0 MHz marker point is placed at bottom of response. (See Figure 8) |

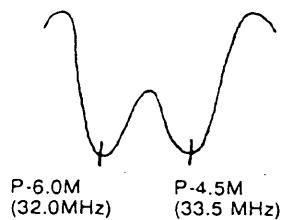


Figure 8. Trap Response


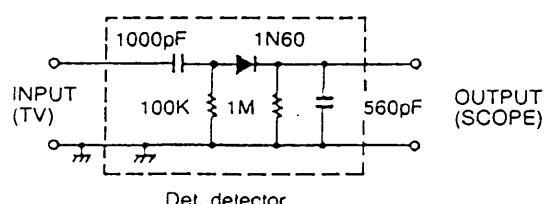


Figure 9. Detector Diagram

CABINET REPLACEMENT PARTS LIST

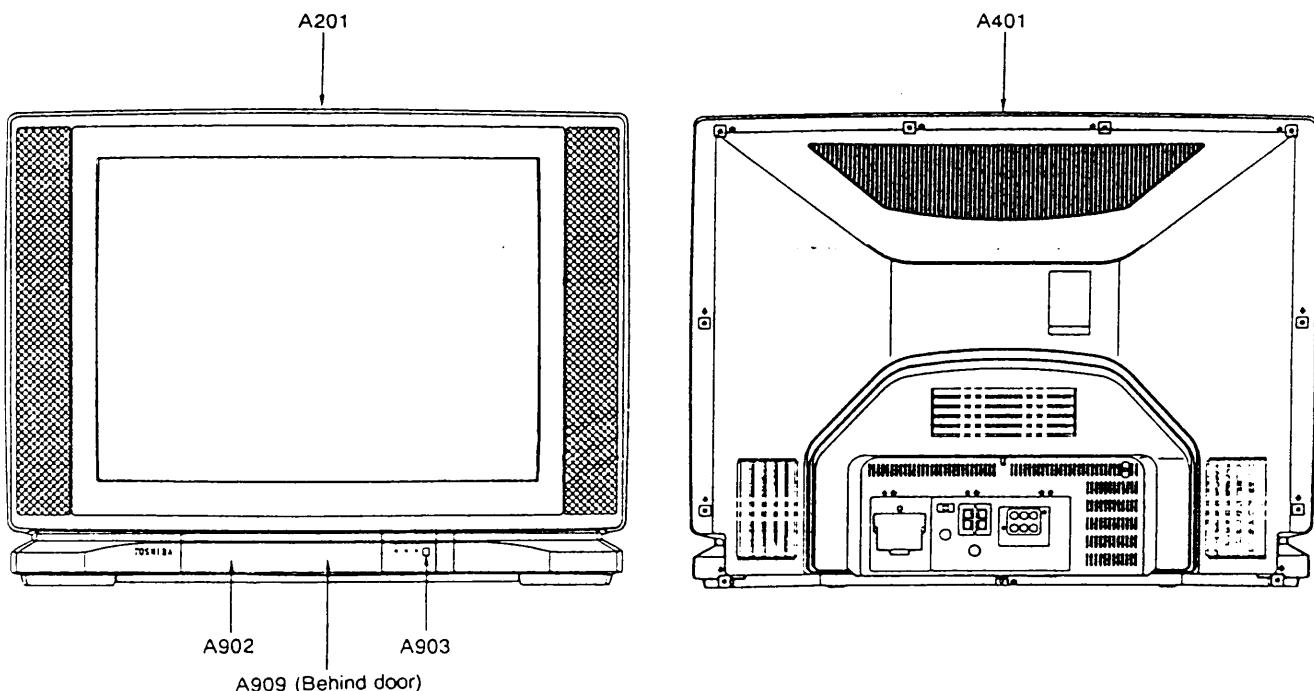

| Location No. | Part No. | Description |
|--------------|----------|--------------------------|
| A201 | 23418904 | Front Cover |
| A401 | 23424155 | Back Cover |
| A701 | 23523802 | Carton Box |
| A702 | 23934151 | Packing |
| A703 | 23941794 | Sheet |
| A705 | 23931746 | Separator |
| A902 | 23424199 | Door |
| A903 | 23443547 | Knob, POWER |
| A904 | 23451068 | Push Catch |
| A905 | 70354038 | Dumper |
| A906 | 23805265 | Leg (Left) |
| A907 | 23805264 | Leg (Right) |
| A909 | 23443525 | Knob, 7-key |
| Y101A | 23561098 | Owner's Guidebook |
| Y108 | 23122780 | AC Adaptor, 2P |
| Y111 | 23164720 | Connector |
| Y123 | 23994860 | Sheet |
| Y124 | 23293988 | Adapter, Aerial Matching |

CHASSIS REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

CAUTION: The international hazard symbols in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 2. Do not degrade the safety of the receiver through improper servicing.

NOTICE: *The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.*

ABBREVIATIONS:

| | | | |
|-----------------|------------------------|-------------------------|-----------------------|
| Capacitors..... | CD : Ceramic Disk | PF : Plastic Film | EL : Electrolytic |
| Resistors..... | CF : Carbon Film | CC : Carbon Composition | MF : Metal Film |
| | OMF : Oxide Metal Film | VR : Variable Resistor | FR : Fusible Resistor |

(All CD and PF capacitors are $\pm 5\%$, 50V and all resistors, $\pm 5\%$, 1/6W unless otherwise noted.)

| Location No. | Part No. | Description |
|-------------------|----------|-------------------------------------|
| CAPACITORS | | |
| C173 | 24538104 | PF, 0.1 μ F |
| C181 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C182 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C183 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C184 | 24212102 | CD, 1000pF, $\pm 10\%$ |
| C201 | 24636100 | EL, 10 μ F, 50V |
| C202 | 24763471 | EL, 470 μ F, $\pm 20\%$, 16V |
| C203 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C204 | 24797220 | EL, 22 μ F, $\pm 20\%$, 50V |
| C205 | 24206478 | EL, 0.47 μ F, 50V |
| C208 | 24212102 | CD, 1000pF, $\pm 10\%$ |
| C209 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C210 | 24636100 | EL, 10 μ F, 50V |
| C217 | 24203470 | EL, 47 μ F, $\pm 20\%$, 16V |
| C218 | 24203220 | EL, 22 μ F, $\pm 20\%$, 16V |
| C219 | 24436270 | CD, 27pF |
| C220 | 24538474 | PF, 0.47 μ F |
| C301 | 24636229 | EL, 2.2 μ F, 50V |
| C302 | 24212152 | CD, 1500pF, $\pm 10\%$ |
| C303 | 24617915 | EL, 1 μ F, $\pm 10\%$, 50V |
| C304 | 24212102 | CD, 1000pF, $\pm 10\%$ |
| C306 | 24693563 | PF, 0.056 μ F, 100V |
| C307 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C311 | 24796222 | EL, 2200 μ F, $\pm 20\%$, 35V |
| C314 | 24214391 | CD, 390pF, $\pm 10\%$, 500V |
| C316 | 24795472 | EL, 4700 μ F, $\pm 20\%$, 25V |
| C317 | 24617912 | EL, 2.2 μ F, $\pm 10\%$, 50V |
| C318 | 24082047 | PF, 0.033 μ F, 100V |
| C319 | 24693272 | PF, 2700pF, 100V |
| C320 | 24214152 | CD, 1500pF, $\pm 10\%$, 500V |
| C323 | 24592103 | PF, 0.01 μ F, $\pm 10\%$ |
| C325 | 24796221 | EL, 220 μ F, $\pm 20\%$, 35V |
| C327 | 24693104 | PF, 0.1 μ F, 100V |
| C330 | 24794471 | EL, 470 μ F, $\pm 20\%$, 16V |
| C331 | 24095678 | PF, 0.22 μ F, $\pm 10\%$, 100V |
| C401 | 24636010 | EL, 1 μ F, 50V |
| C402 | 24353241 | CD, 240pF |
| C403 | 24636339 | EL, 3.3 μ F, 50V |
| C405 | 24593203 | PF, 0.02 μ F |
| C406 | 24593203 | PF, 0.02 μ F |

| Location No. | Part No. | Description |
|--------------|----------|-----------------------------------|
| C407 | 24593243 | PF, 0.024 μ F |
| C408 | 24617929 | EL, 18 μ F, $\pm 20\%$, 50V |
| C409 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C413 | 24593182 | PF, 1800pF |
| C416 | 24214222 | CD, 2200pF, $\pm 10\%$, 500V |
| C417 | 24214331 | CD, 330pF, $\pm 10\%$, 500V |
| C418 | 24677100 | EL, 10 μ F, $\pm 20\%$, 160V |
| C420 | 24436331 | CD, 330pF |
| △ C440 | 24082166 | PF, 6800pF, $\pm 3\%$, 2kV |
| C442 | 24214221 | CD, 220pF, $\pm 10\%$, 500V |
| △ C444 | 24095773 | PF, 3600pF, $\pm 3\%$, 2kV |
| C445 | 24828473 | PF, 0.047 μ F, 200V |
| C446 | 24640962 | EL, 33 μ F, $\pm 20\%$, 200V |
| C447 | 24640968 | EL, 10 μ F, 400V |
| C448 | 24754222 | EL, 2200 μ F, 25V |
| △ C463 | 24212222 | CD, 2200pF, $\pm 10\%$ |
| C466 | 24794471 | EL, 470 μ F, $\pm 20\%$, 16V |
| C468 | 24538474 | PF, 0.47 μ F |
| C470 | 24095790 | PF, 0.22 μ F, 400V |
| C473 | 24095949 | PF, 0.33 μ F, 200V |
| C474 | 24828303 | PF, 0.03 μ F, 200V |
| C501 | 24763471 | EL, 470 μ F, $\pm 20\%$, 16V |
| C502 | 24636100 | EL, 10 μ F, 50V |
| C503 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C504 | 24353150 | CD, 15pF |
| C505 | 24593273 | PF, 0.027 μ F |
| C506 | 24593683 | PF, 0.068 μ F |
| C507 | 24593103 | PF, 0.01 μ F |
| C508 | 24085028 | EL, 2.2 μ F, 25V, Non-Polar |
| C509 | 24353330 | CD, 33pF |
| C510 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C511 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C512 | 24353200 | CD, 20pF |
| C513 | 24436101 | CD, 100pF |
| C514 | 24436101 | CD, 100pF |
| C515 | 24636010 | EL, 1 μ F, 50V |
| C516 | 24538104 | PF, 0.1 μ F |
| C517 | 24538104 | PF, 0.1 μ F |
| C518 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C519 | 24232103 | CD, 0.01 μ F, +80%, -20% |
| C520 | 24206478 | EL, 0.47 μ F, 50V |

| Location No. | Part No. | Description |
|--------------|----------|--|
| C521 | 24538474 | PF, 0.47μF |
| C522 | 24538474 | PF, 0.47μF |
| C523 | 24538474 | PF, 0.47μF |
| C524 | 24232103 | CD, 0.01μF, +80%, -20% |
| C525 | 24436820 | CD, 82pF |
| C526 | 24436820 | CD, 82pF |
| C527 | 24436820 | CD, 82pF |
| C529 | 24353300 | CD, 30pF |
| C530 | 24797220 | EL, 22μF, ±20%, 50V |
| C531 | 24797100 | EL, 10μF, ±20%, 50V |
| C532 | 24436101 | CD, 100pF |
| C533 | 24436101 | CD, 100pF |
| C534 | 24436101 | CD, 100pF |
| C535 | 24206100 | EL, 10μF, 50V |
| C536 | 24206478 | EL, 0.47μF, 50V |
| C537 | 24794331 | EL, 330μF, 16V |
| C540 | 24436301 | CD, 300pF |
| C541 | 24436301 | CD, 300pF |
| C542 | 24436301 | CD, 300pF |
| C544 | 24436101 | CD, 100pF |
| C601 | 24436471 | CD, 470pF |
| C602 | 24436471 | CD, 470pF |
| C613 | 24795470 | EL, 47μF, ±20%, 25V |
| C614 | 24634220 | EL, 22μF, 25V |
| C615 | 24636479 | EL, 4.7μF, 50V |
| C616 | 24636479 | EL, 4.7μF, 50V |
| C617 | 24636479 | EL, 4.7μF, 50V |
| C618 | 24636229 | EL, 2.2μF, 50V |
| C619 | 24636010 | EL, 1μF, 50V |
| C620 | 24538563 | PF, 0.056μF |
| C621 | 24538103 | PF, 0.01μF |
| C622 | 24794101 | EL, 100μF, ±20%, 16V |
| C623 | 24232103 | CD, 0.01μF, +80%, -20% |
| C624 | 24085031 | EL, 1μF, ±20%, 25V, Non-Polar |
| C625 | 24797470 | EL, 47μF, ±20%, 50V |
| C626 | 24085031 | EL, 1μF, ±20%, 25V, Non-Polar |
| C627 | 24538103 | PF, 0.01μF |
| C628 | 24538563 | PF, 0.056μF |
| C629 | 24538224 | PF, 0.22μF |
| C630 | 24636100 | EL, 10μF, 50V |
| C631 | 24636479 | EL, 4.7μF, 50V |
| C632 | 24636229 | EL, 2.2μF, 50V |
| C633 | 24636479 | EL, 4.7μF, 50V |
| C634 | 24593122 | PF, 1200pF |
| C635 | 24794470 | EL, 47μF, ±20%, 16V |
| C636 | 24636010 | EL, 1μF, 50V |
| C637 | 24794470 | EL, 47μF, ±20%, 16V |
| C638 | 24636010 | EL, 1μF, 50V |
| C639 | 24636229 | EL, 2.2μF, 50V |
| C640 | 24538224 | PF, 0.22μF |
| C641 | 24797471 | EL, 470μF, ±20%, 50V |
| C642 | 24794470 | EL, 47μF, ±20%, 16V |
| C643 | 24538104 | PF, 0.1μF |
| C644 | 24795102 | EL, 1000μF, ±20%, 25V |
| C645 | 24538104 | PF, 0.1μF |
| C646 | 24795102 | EL, 1000μF, ±20%, 25V |
| C647 | 24593122 | PF, 1200pF |
| C651 | 24093950 | Variable Capacitor, 5.5 to 30pF, 100V |
| C670 | 24232103 | CD, 0.01μF, +80%, -20% |
| C671 | 24232103 | CD, 0.01μF, +80%, -20% |
| C672 | 24212102 | CD, 1000pF, ±10% |

| Location No. | Part No. | Description |
|--------------|----------|-----------------------------------|
| C673 | 24436471 | CD, 470pF |
| C674 | 24436471 | CD, 470pF |
| C675 | 24795101 | EL, 100μF, 25V |
| C676 | 24436220 | CD, 22pF |
| C677 | 24636010 | EL, 1μF, 50V |
| C679 | 24232103 | CD, 0.01μF, +80%, -20% |
| C680 | 24436470 | CD, 47pF |
| C681 | 24436470 | CD, 47pF |
| C682 | 24212102 | CD, 1000pF, ±10% |
| C683 | 24212222 | CD, 2200pF, ±10% |
| C684 | 24232103 | CD, 0.01μF, +80%, -20% |
| C685 | 24763331 | EL, 330μF, ±20%, 16V |
| C686 | 24232103 | CD, 0.01μF, +80%, -20% |
| C687 | 24353150 | CD, 15pF |
| C688 | 24340220 | CD, 22pF |
| C689 | 24353620 | CD, 62pF |
| C690 | 24232103 | CD, 0.01μF, +80%, -20% |
| C691 | 24436470 | CD, 47pF |
| C692 | 24593562 | PF, 5600pF |
| C693 | 24232103 | CD, 0.01μF, +80%, -20% |
| C801 | 24095951 | PF, 0.1μF, ±20%, AC250V |
| C802 | 24094654 | CD, 470pF, ±20%, AC400V |
| C803 | 24094654 | CD, 470pF, ±20%, AC400V |
| C804 | 24094654 | CD, 470pF, ±20%, AC400V |
| C805 | 24094654 | CD, 470pF, ±20%, AC400V |
| C806 | 24082089 | PF, 0.1μF, ±20%, AC250V |
| C807 | 24797101 | EL, 100μF, ±20%, 50V |
| C808 | 24648339 | EL, 3.3μF, 450V |
| C809 | 24092300 | CD, 0.01μF, +80%, -20%, AC250V |
| C810 | 24538104 | PF, 0.1μF |
| C811 | 24092281 | CD, 4700pF, ±20%, AC250V |
| C812 | 24092281 | CD, 4700pF, ±20%, AC250V |
| C813 | 24092281 | CD, 4700pF, ±20%, AC250V |
| C814 | 24092281 | CD, 4700pF, ±20%, AC250V |
| C815 | 24538104 | PF, 0.1μF |
| C816 | 24794221 | EL, 220μF, 16V |
| C817 | 24796471 | EL, 470μF, 35V |
| C818 | 24086921 | EL, 680μF, ±20%, 250V |
| C819 | 24086921 | EL, 680μF, ±20%, 250V |
| C820 | 24636100 | EL, 10μF, 50V |
| C824 | 24797221 | EL, 220μF, ±20%, 50V |
| C825 | 24212102 | CD, 1000pF, ±10% |
| C826 | 24538104 | PF, 0.1μF |
| C827 | 24598561 | PF, 560pF |
| C828 | 24636100 | EL, 10μF, 50V |
| C829 | 24757470 | EL, 47μF, 100V |
| C830 | 24095931 | PF, 2200pF, 1600V |
| C831 | 24633100 | EL, 10μF, 16V |
| C832 | 24092336 | CD, 180pF, ±10%, 2kV |
| C833 | 24086945 | EL, 330μF, ±20%, 200V |
| C834 | 24538104 | PF, 0.1μF |
| C835 | 24214221 | CD, 220pF, ±10%, 500V |
| C836 | 24795222 | EL, 2200μF, 25V |
| C837 | 24436561 | CD, 560pF |
| C838 | 24598561 | PF, 560pF |
| C839 | 24538474 | PF, 0.47μF |
| C840 | 24636100 | EL, 10μF, 50V |
| C844 | 24214221 | CD, 220pF, ±10%, 500V |
| C845 | 24795101 | EL, 100μF, 25V |
| C846 | 24214221 | CD, 220pF, ±10%, 500V |
| C847 | 24797222 | EL, 2200μF, ±20%, 50V |
| C861 | 24092340 | CD, 390pF, ±10%, 2kV |
| C862 | 24636479 | EL, 4.7μF, 50V |

| Location No. | Part No. | Description | Location No. | Part No. | Description |
|--------------|----------|-------------------------|--------------|----------|------------------------|
| C863 | 24095951 | PF, 0.1μF, ±20%, AC250V | CN17 | 24436180 | CD, 18pF |
| C864 | 24092343 | CD, 680pF, ±10%, 2kV | CN18 | 24232103 | CD, 0.01μF, +80%, -20% |
| C865 | 24214391 | CD, 390pF, ±10%, 500V | CN40 | 24232103 | CD, 0.01μF, +80%, -20% |
| C866 | 24214391 | CD, 390pF, ±10%, 500V | CN41 | 24436470 | CD, 47pF |
| C867 | 24538474 | PF, 0.47μF | CN42 | 24436470 | CD, 47pF |
| C869 | 24636100 | EL, 10μF, 50V | CS01 | 24636100 | EL, 10μF, 50V |
| C871 | 24214391 | CD, 390pF, ±10%, 500V | CS02 | 24591392 | PF, 3900pF |
| C872 | 24212101 | CD, 100pF, ±10% | CS03 | 24538153 | PF, 0.015μF |
| C901(U904A) | 24700479 | EL, 4.7μF, ±20%, 250V | CS04 | 24636229 | EL, 2.2μF, 50V |
| C901(U904B) | 24640987 | EL, 2.2μF, 350V | CS05 | 24538563 | PF, 0.056μF |
| C902(U904A) | 24095923 | PF, 4700pF, 1600V | CS07 | 24538223 | PF, 0.022μF |
| C902(U904B) | 24095981 | PF, 2200pF, 1600V | CS09 | 24538563 | PF, 0.056μF |
| CA01 | 24794470 | EL, 47μF, ±20%, 16V | CS12 | 24794101 | EL, 100μF, ±20%, 16V |
| CA02 | 24232103 | CD, 0.01μF, +80%, -20% | CS13 | 24636479 | EL, 4.7μF, 50V |
| CA03 | 24633100 | EL, 10μF, 16V | CS14 | 24232103 | CD, 0.01μF, +80%, -20% |
| CA04 | 24436300 | CD, 30pF | CV01 | 24206010 | EL, 1μF, 50V |
| CA05 | 24436300 | CD, 30pF | CV02 | 24206010 | EL, 1μF, 50V |
| CA06 | 24232103 | CD, 0.01μF, +80%, -20% | CV03 | 24203100 | EL, 10μF, ±20%, 16V |
| CA07 | 24633100 | EL, 10μF, 16V | CV04 | 24206010 | EL, 1μF, 50V |
| CA08 | 24636100 | EL, 10μF, 50V | CV05 | 24206010 | EL, 1μF, 50V |
| CA11 | 24436391 | CD, 390pF | CV06 | 24203100 | EL, 10μF, ±20%, 16V |
| CA12 | 24436221 | CD, 220pF | CV07 | 24232103 | CD, 0.01μF, +80%, -20% |
| CA13 | 24636229 | EL, 2.2μF, 50V | CV11 | 24206010 | EL, 1μF, 50V |
| CA14 | 24232103 | CD, 0.01μF, +80%, -20% | CV12 | 24206010 | EL, 1μF, 50V |
| CA15 | 24538104 | PF, 0.1μF | CV14 | 24232103 | CD, 0.01μF, +80%, -20% |
| CA16 | 24538104 | PF, 0.1μF | CV15 | 24203100 | EL, 10μF, ±20%, 16V |
| CA17 | 24538104 | PF, 0.1μF | CV16 | 24232103 | CD, 0.01μF, +80%, -20% |
| CA18 | 24636229 | EL, 2.2μF, 50V | CV17 | 24206010 | EL, 1μF, 50V |
| CA19 | 24636010 | EL, 1μF, 50V | CV19 | 24436101 | CD, 100pF |
| CA20 | 24794331 | EL, 330μF, 16V | CV21 | 24203100 | EL, 10μF, ±20%, 16V |
| CA21 | 24636229 | EL, 2.2μF, 50V | CV22 | 24203220 | EL, 22μF, ±20%, 16V |
| CA22 | 24794471 | EL, 470μF, ±20%, 16V | CV63 | 24203100 | EL, 10μF, ±20%, 16V |
| CA23 | 24591472 | PF, 4700pF | CV66 | 24202221 | EL, 220μF, ±20%, 10V |
| CA28 | 24212102 | CD, 1000pF, ±10% | CV67 | 24206010 | EL, 1μF, 50V |
| CA35 | 24212561 | CD, 560pF, ±10% | CV68 | 24206010 | EL, 1μF, 50V |
| CA37 | 24212102 | CD, 1000pF, ±10% | CV69 | 24202221 | EL, 220μF, ±20%, 10V |
| CA38 | 24636010 | EL, 1μF, 50V | CV70 | 24232103 | CD, 0.01μF, +80%, -20% |
| CB02 | 24436101 | CD, 100pF | CV71 | 24232103 | CD, 0.01μF, +80%, -20% |
| CB03 | 24436101 | CD, 100pF | CX02 | 24538104 | PF, 0.1μF |
| CD01 | 24796101 | EL, 100μF, 35V | CX03 | 24538104 | PF, 0.1μF |
| △ CD02 | 24095881 | PF, 0.018μF, ±3%, 630V | CX04 | 24538104 | PF, 0.1μF |
| CD05 | 24591683 | PF, 0.068μF | CX09 | 24206010 | EL, 1μF, 50V |
| CD06 | 24668470 | EL, 47μF, ±20%, 35V | CX10 | 24793101 | EL, 100μF, 10V |
| CD07 | 24668471 | EL, 470μF, ±20%, 35V | CZ01 | 24203220 | EL, 22μF, ±20%, 16V |
| CD08 | 24538154 | PF, 0.15μF | CZ02 | 24203101 | EL, 100μF, ±20%, 16V |
| CD09 | 24538154 | PF, 0.15μF | CZ04 | 24203100 | EL, 10μF, ±20%, 16V |
| CD10 | 24206229 | EL, 2.2μF, 50V | CZ05 | 24232103 | CD, 0.01μF, +80%, -20% |
| CD11 | 24640871 | EL, 4.7μF, ±20%, 100V | CZ06 | 24436680 | CD, 68pF |
| CD14 | 24538103 | PF, 0.01μF | CZ07 | 24794101 | EL, 100μF, ±20%, 16V |
| CD15 | 24206010 | EL, 1μF, 50V | | | |
| CM01 | 24436201 | CD, 200pF | | | |
| CM02 | 24436201 | CD, 200pF | | | |
| CM05 | 24232103 | CD, 0.01μF, +80%, -20% | | | |
| CM06 | 24357270 | CD, 27pF | | | |
| CM07 | 24538563 | PF, 0.056μF | | | |
| CM08 | 24232103 | CD, 0.01μF, +80%, -20% | | | |
| CM09 | 24232103 | CD, 0.01μF, +80%, -20% | | | |
| CM10 | 24436100 | CD, 10pF, ±0.25pF | | | |
| CN10 | 24436101 | CD, 100pF | | | |
| CN11 | 24436330 | CD, 33pF | | | |
| CN13 | 24232103 | CD, 0.01μF, +80%, -20% | | | |
| CN14 | 24436470 | CD, 47pF | | | |
| CN15 | 24436300 | CD, 30pF | | | |
| CN16 | 24436470 | CD, 47pF | | | |

RESISTORS

| | | |
|------|----------|--------------|
| R173 | 24366102 | CF, 1k ohm |
| R181 | 24366131 | CF, 130 ohm |
| R182 | 24366680 | CF, 68 ohm |
| R183 | 24366682 | CF, 6800 ohm |
| R184 | 24366332 | CF, 3300 ohm |
| R185 | 24366271 | CF, 270 ohm |
| R186 | 24366223 | CF, 22k ohm |
| R187 | 24366331 | CF, 330 ohm |
| R206 | 24366471 | CF, 470 ohm |
| R208 | 24366101 | CF, 100 ohm |
| R209 | 24366103 | CF, 10k ohm |
| R210 | 24366203 | CF, 20k ohm |
| R211 | 24366622 | CF, 6200 ohm |

| Location No. | Part No. | Description |
|--------------|----------|---------------------|
| R212 | 24366103 | CF, 10k ohm |
| R213 | 24366101 | CF, 100 ohm |
| R214 | 24366222 | CF, 2200 ohm |
| R215 | 24366222 | CF, 2200 ohm |
| R216 | 24366133 | CF, 13k ohm |
| R217 | 24366101 | CF, 100 ohm |
| R218 | 24366222 | CF, 2200 ohm |
| R219 | 24366472 | CF, 4700 ohm |
| R223 | 24366432 | CF, 4300 ohm |
| R224 | 24366331 | CF, 330 ohm |
| R226 | 24366362 | CF, 3600 ohm |
| R227 | 24366102 | CF, 1k ohm |
| R228 | 24366822 | CF, 8200 ohm |
| R229 | 24366821 | CF, 820 ohm |
| R230 | 24366821 | CF, 820 ohm |
| R231 | 24366821 | CF, 820 ohm |
| R240 | 24366153 | CF, 15k ohm |
| R241 | 24366682 | CF, 6800 ohm |
| R242 | 24552101 | OMF, 100 ohm, 1/2W |
| R243 | 24366201 | CF, 200 ohm |
| R244 | 24366102 | CF, 1k ohm |
| R247 | 24366121 | CF, 120 ohm |
| R252 | 24066596 | VR, 500 ohm, 1/10W |
| R253 | 24066596 | VR, 500 ohm, 1/10W |
| R255 | 24066926 | VR, 10k ohm, 1/10W |
| R301 | 24366301 | CF, 300 ohm |
| R302 | 24366244 | CF, 240k ohm |
| R303 | 24366393 | CF, 39k ohm |
| R304 | 24366102 | CF, 1k ohm |
| R305 | 24366161 | CF, 160 ohm |
| R306 | 24366203 | CF, 20k ohm |
| R307 | 24366101 | CF, 100 ohm |
| R308 | 24366561 | CF, 560 ohm |
| R311 | 24552242 | OMF, 2400 ohm, 1/2W |
| R312 | 24366103 | CF, 10k ohm |
| R313 | 24366184 | CF, 180k ohm |
| R318 | 24366102 | CF, 1k ohm |
| R320 | 24366471 | CF, 470 ohm |
| R322 | 24552472 | OMF, 4700 ohm, 1/2W |
| R323 | 24323828 | OMF, 0.82 ohm, 2W |
| R325 | 24366123 | CF, 12k ohm |
| R327 | 24983479 | MF, 4.7 ohm, 1W |
| R328 | 24552111 | OMF, 110 ohm, 1/2W |
| R329 | 24366123 | CF, 12k ohm |
| R331 | 24366473 | CF, 47k ohm |
| R332 | 24553122 | OMF, 1200 ohm, 1W |
| R333 | 24366913 | CF, 91k ohm |
| R334 | 24366103 | CF, 10k ohm |
| R335 | 24366823 | CF, 82k ohm |
| R337 | 24553122 | OMF, 1200 ohm, 1W |
| R340 | 24366472 | CF, 4700 ohm |
| R341 | 24366103 | CF, 10k ohm |
| R351 | 24066924 | VR, 50k ohm, 1/10W |
| R386 | 24366102 | CF, 1k ohm |
| R387 | 24366103 | CF, 10k ohm |
| R401 | 24366472 | CF, 4700 ohm |
| R402 | 24366273 | CF, 27k ohm |
| R403 | 24366302 | CF, 3k ohm |
| R405 | 24366511 | CF, 510 ohm |
| R406 | 24366271 | CF, 270 ohm |
| R407 | 24366151 | CF, 150 ohm |
| R408 | 24366562 | CF, 5600 ohm |
| R409 | 24366103 | CF, 10k ohm |
| R410 | 24552432 | OMF, 4300 ohm, 1/2W |

| Location No. | Part No. | Description |
|--------------|----------|--------------------------|
| R411 | 24366431 | CF, 430 ohm |
| R412 | 24366151 | CF, 150 ohm |
| R417 | 24007642 | Cement, 5600 ohm, 5W |
| R418 | 24553682 | OMF, 6800 ohm, 1W |
| R420 | 24366104 | CF, 100k ohm |
| R440 | 24366103 | CF, 10k ohm |
| R441 | 24366103 | CF, 10k ohm |
| R443 | 24322109 | OMF, 1 ohm, 1W |
| R444 | 24994828 | MF, 0.82 ohm, ±10%, 2W |
| R448 | 24323189 | OMF, 1.8 ohm, 2W |
| R451 | 24066951 | VR, 20k ohm, 1/10W |
| R460 | 24552161 | OMF, 160 ohm, 1/2W |
| R463 | 24553102 | OMF, 1k ohm, 1W |
| R464 | 24366683 | CF, 68k ohm |
| R465 | 24366433 | CF, 43k ohm |
| R466 | 24366912 | CF, 9100 ohm |
| R467 | 24366272 | CF, 2700 ohm |
| R468 | 24366102 | CF, 1k ohm |
| R471 | 24533151 | FR, 150 ohm, 2W |
| R502 | 24366334 | CF, 330k ohm |
| R503 | 24366202 | CF, 2k ohm |
| R504 | 24366471 | CF, 470 ohm |
| R505 | 24366822 | CF, 8200 ohm |
| R506 | 24366821 | CF, 820 ohm |
| R507 | 24366822 | CF, 8200 ohm |
| R508 | 24366821 | CF, 820 ohm |
| R509 | 24366203 | CF, 20k ohm |
| R510 | 24366101 | CF, 100 ohm |
| R511 | 24366562 | CF, 5600 ohm |
| R512 | 24366152 | CF, 1500 ohm |
| R513 | 24366152 | CF, 1500 ohm |
| R515 | 24366221 | CF, 220 ohm |
| R516 | 24366221 | CF, 220 ohm |
| R517 | 24366221 | CF, 220 ohm |
| R518 | 24945475 | CC, 4.7M ohm, ±10%, 1/4W |
| R519 | 24366103 | CF, 10k ohm |
| R520 | 24366332 | CF, 3300 ohm |
| R521 | 24366102 | CF, 1k ohm |
| R522 | 24360185 | CF, 1.8M ohm, 1/8W |
| R525 | 24366122 | CF, 1200 ohm |
| R526 | 24366122 | CF, 1200 ohm |
| R527 | 24366103 | CF, 10k ohm |
| R528 | 24366103 | CF, 10k ohm |
| R531 | 24366161 | CF, 160 ohm |
| R532 | 24366361 | CF, 360 ohm |
| R533 | 24366362 | CF, 3600 ohm |
| R535 | 24366361 | CF, 360 ohm |
| R537 | 24366362 | CF, 3600 ohm |
| R538 | 24366391 | CF, 390 ohm |
| R539 | 24366362 | CF, 3600 ohm |
| R541 | 24366821 | CF, 820 ohm |
| R542 | 24366241 | CF, 240 ohm |
| R543 | 24366103 | CF, 10k ohm |
| R544 | 24366101 | CF, 100 ohm |
| R547 | 24366102 | CF, 1k ohm |
| R548 | 24366102 | CF, 1k ohm |
| R549 | 24366102 | CF, 1k ohm |
| R551 | 24066955 | VR, 1k ohm, 1/10W |
| R557 | 24066600 | VR, 10k ohm, 1/10W |
| R558 | 24066600 | VR, 10k ohm, 1/10W |
| R559 | 24066600 | VR, 10k ohm, 1/10W |
| R565 | 24366560 | CF, 56 ohm |
| R566 | 24366560 | CF, 56 ohm |
| R567 | 24366560 | CF, 56 ohm |

| Location No. | Part No. | Description |
|--------------|----------|--------------------|
| R568 | 24366102 | CF, 1k ohm |
| R570 | 24366302 | CF, 3k ohm |
| R571 | 24366302 | CF, 3k ohm |
| R572 | 24366302 | CF, 3k ohm |
| R576 | 24366472 | CF, 4700 ohm |
| R577 | 24366472 | CF, 4700 ohm |
| R578 | 24366101 | CF, 100 ohm |
| R579 | 24366103 | CF, 10k ohm |
| R580 | 24366101 | CF, 100 ohm |
| R581 | 24366103 | CF, 10k ohm |
| R591 | 24383153 | OMF, 15k ohm, 2W |
| R592 | 24383153 | OMF, 15k ohm, 2W |
| R593 | 24383153 | OMF, 15k ohm, 2W |
| R603 | 24366101 | CF, 100 ohm |
| R604 | 24366332 | CF, 3300 ohm |
| R605 | 24366101 | CF, 100 ohm |
| R606 | 24366332 | CF, 3300 ohm |
| R620 | 24366102 | CF, 1k ohm |
| R621 | 24366103 | CF, 10k ohm |
| R622 | 24366103 | CF, 10k ohm |
| R623 | 24366472 | CF, 4700 ohm |
| R624 | 24366154 | CF, 150k ohm |
| R625 | 24366154 | CF, 150k ohm |
| R626 | 24366102 | CF, 1k ohm |
| R627 | 24366102 | CF, 1k ohm |
| R628 | 24366103 | CF, 10k ohm |
| R629 | 24366244 | CF, 240k ohm |
| R630 | 24366472 | CF, 4700 ohm |
| R631 | 24366153 | CF, 15k ohm |
| R632 | 24366562 | CF, 5600 ohm |
| R633 | 24366562 | CF, 5600 ohm |
| R634 | 24366153 | CF, 15k ohm |
| R635 | 24366472 | CF, 4700 ohm |
| R636 | 24366222 | CF, 2200 ohm |
| R637 | 24366222 | CF, 2200 ohm |
| R638 | 24366682 | CF, 6800 ohm |
| R639 | 24366472 | CF, 4700 ohm |
| R640 | 24366473 | CF, 47k ohm |
| R641 | 24366473 | CF, 47k ohm |
| R642 | 24366472 | CF, 4700 ohm |
| R643 | 24366682 | CF, 6800 ohm |
| R644 | 24366229 | CF, 2.2 ohm |
| R645 | 24366229 | CF, 2.2 ohm |
| R646 | 24366102 | CF, 1k ohm |
| R665 | 24552331 | OMF, 330 ohm, 1/2W |
| R666 | 24552331 | OMF, 330 ohm, 1/2W |
| R667 | 24366103 | CF, 10k ohm |
| R668 | 24366103 | CF, 10k ohm |
| R669 | 24366334 | CF, 330k ohm |
| R670 | 24366821 | CF, 820 ohm |
| R671 | 24366272 | CF, 2700 ohm |
| R672 | 24366152 | CF, 1500 ohm |
| R673 | 24366472 | CF, 4700 ohm |
| R674 | 24366471 | CF, 470 ohm |
| R675 | 24366122 | CF, 1200 ohm |
| R676 | 24366105 | CF, 1M ohm |
| R677 | 24552331 | OMF, 330 ohm, 1/2W |
| R678 | 24366152 | CF, 1500 ohm |
| R679 | 24366473 | CF, 47k ohm |
| R680 | 24366104 | CF, 100k ohm |
| R681 | 24366102 | CF, 1k ohm |
| R682 | 24366182 | CF, 1800 ohm |
| R683 | 24366472 | CF, 4700 ohm |
| R684 | 24366182 | CF, 1800 ohm |

| Location No. | Part No. | Description |
|--------------|----------|---------------------------------|
| R685 | 24366153 | CF, 15k ohm |
| R686 | 24366101 | CF, 100 ohm |
| R687 | 24366562 | CF, 5600 ohm |
| R688 | 24366221 | CF, 220 ohm |
| R689 | 24366102 | CF, 1k ohm |
| R690 | 24366471 | CF, 470 ohm |
| R691 | 24366223 | CF, 22k ohm |
| R692 | 24552680 | OMF, 68 ohm, 1/2W |
| R693 | 24366103 | CF, 10k ohm |
| R694 | 24366752 | CF, 7500 ohm |
| R695 | 24366103 | CF, 10k ohm |
| R696 | 24366472 | CF, 4700 ohm |
| R697 | 24366103 | CF, 10k ohm |
| R698 | 24366103 | CF, 10k ohm |
| R801 | 24942565 | CC, 5.6M ohm, 1/2W |
| R802 | 24522390 | Cement, 39 ohm, $\pm 10\%$, 2W |
| R803 | 24007870 | Cement; 1.5 ohm, 15W |
| R804 | 24366331 | CF, 330 ohm |
| R805 | 24007870 | Cement, 1.5 ohm, 15W |
| R806 | 24383333 | OMF, 33k ohm, 2W |
| R807 | 24383333 | OMF, 33k ohm, 2W |
| R808 | 24366362 | CF, 3600 ohm |
| R810 | 24384823 | OMF, 82k ohm, 3W |
| R812 | 24321689 | OMF, 6.8 ohm, 1/2W |
| R813 | 24553471 | OMF, 470 ohm, 1W |
| R814 | 24321338 | OMF, 0.33 ohm, 1/2W |
| R815 | 24366683 | CF, 68k ohm |
| R816 | 24367123 | CF, 12k ohm, $\pm 2\%$ |
| R817 | 24007952 | Cement, 6.8 ohm, 5W |
| R818 | 24366331 | CF, 330 ohm |
| R819 | 24327104 | MF, 100k ohm, $\pm 1\%$, 1/4W |
| R820 | 24366100 | CF, 10 ohm |
| R821 | 24366101 | CF, 100 ohm |
| R822 | 24322398 | OMF, 0.39 ohm, 1W |
| R823 | 24007738 | Cement, 330 ohm, 10W |
| R824 | 24322398 | OMF, 0.39 ohm, 1W |
| R825 | 24366101 | CF, 100 ohm |
| R826 | 24366331 | CF, 330 ohm |
| R827 | 24007568 | Cement, 1800 ohm, 5W |
| R828 | 24366103 | CF, 10k ohm |
| R829 | 24383103 | OMF, 10k ohm, 2W |
| R830 | 24552391 | OMF, 390 ohm, 1/2W |
| R831 | 24366102 | CF, 1k ohm |
| R832 | 24321338 | OMF, 0.33 ohm, 1/2W |
| R833 | 24327134 | MF, 130k ohm, $\pm 1\%$, 1/4W |
| R834 | 24327222 | MF, 2200 ohm, $\pm 1\%$, 1/4W |
| R835 | 24366823 | CF, 82k ohm |
| R836 | 24327913 | MF, 91k ohm, $\pm 1\%$, 1/4W |
| R837 | 24381100 | OMF, 10 ohm, 1/2W |
| R838 | 24366103 | CF, 10k ohm |
| R840 | 24366103 | CF, 10k ohm |
| R841 | 24381562 | OMF, 5600 ohm, 1/2W |
| R843 | 24366332 | CF, 3300 ohm |
| R844 | 24366103 | CF, 10k ohm |
| R845 | 24366332 | CF, 3300 ohm |
| R847 | 24366102 | CF, 1k ohm |
| R851 | 24066924 | VR, 50k ohm, 1/10W |
| R852 | 24066925 | VR, 20k ohm, 1/10W |
| R860 | 24366182 | CF, 1800 ohm |
| R861 | 24982338 | MF, 0.33 ohm, 1/2W |
| R863 | 24383152 | OMF, 1500 ohm, 2W |
| R865 | 24366222 | CF, 2200 ohm |
| R867 | 24366392 | CF, 3900 ohm |
| R868 | 24366103 | CF, 10k ohm |

| Location No. | Part No. | Description |
|--------------|----------|---------------------------------------|
| R869 | 24366102 | CF, 1k ohm |
| R870 | 24366102 | CF, 1k ohm |
| R871 | 24366222 | CF, 2200 ohm |
| R872 | 24366103 | CF, 10k ohm |
| R890 | 24000875 | PTC Thermistor, 18 ohm, ±20%, 290V |
| R901 | 24946272 | CC, 2700 ohm, ±10%, 1/2W |
| R902 | 24946272 | CC, 2700 ohm, ±10%, 1/2W |
| R903 | 24946272 | CC, 2700 ohm, ±10%, 1/2W |
| △ R920 | 24000880 | FR, 5.1 ohm, 1W |
| RA01 | 24366472 | CF, 4700 ohm |
| RA02 | 24366102 | CF, 1k ohm |
| RA03 | 24366101 | CF, 100 ohm |
| RA05 | 24366102 | CF, 1k ohm |
| RA06 | 24366102 | CF, 1k ohm |
| RA07 | 24366102 | CF, 1k ohm |
| RA08 | 24366102 | CF, 1k ohm |
| RA09 | 24366102 | CF, 1k ohm |
| RA10 | 24366102 | CF, 1k ohm |
| RA11 | 24366102 | CF, 1k ohm |
| RA12 | 24366102 | CF, 1k ohm |
| RA13 | 24366102 | CF, 1k ohm |
| RA14 | 24366103 | CF, 10k ohm |
| RA15 | 24366102 | CF, 1k ohm |
| RA16 | 24366102 | CF, 1k ohm |
| RA17 | 24366102 | CF, 1k ohm |
| RA18 | 24366102 | CF, 1k ohm |
| RA19 | 24366102 | CF, 1k ohm |
| RA20 | 24366123 | CF, 12k ohm |
| RA21 | 24366102 | CF, 1k ohm |
| RA22 | 24366102 | CF, 1k ohm |
| RA23 | 24366102 | CF, 1k ohm |
| RA24 | 24366471 | CF, 470 ohm |
| RA25 | 24366102 | CF, 1k ohm |
| RA26 | 24366102 | CF, 1k ohm |
| RA27 | 24366102 | CF, 1k ohm |
| RA28 | 24366103 | CF, 10k ohm |
| RA29 | 24366102 | CF, 1k ohm |
| RA30 | 24366223 | CF, 22k ohm |
| RA31 | 24366102 | CF, 1k ohm |
| RA32 | 24366102 | CF, 1k ohm |
| RA33 | 24366471 | CF, 470 ohm |
| RA34 | 24366101 | CF, 100 ohm |
| RA35 | 24366473 | CF, 47k ohm |
| RA36 | 24366221 | CF, 220 ohm |
| RA37 | 24366563 | CF, 56k ohm |
| RA38 | 24366333 | CF, 33k ohm |
| RA39 | 24366223 | CF, 22k ohm |
| RA41 | 24366103 | CF, 10k ohm |
| RA42 | 24366102 | CF, 1k ohm |
| RA46 | 24366202 | CF, 2k ohm |
| RA47 | 24366392 | CF, 3900 ohm |
| RA48 | 24366432 | CF, 4300 ohm |
| RA49 | 24366432 | CF, 4300 ohm |
| RA53 | 24366102 | CF, 1k ohm |
| RA54 | 24366223 | CF, 22k ohm |
| RA55 | 24366333 | CF, 33k ohm |
| RA56 | 24366333 | CF, 33k ohm |
| RA57 | 24366333 | CF, 33k ohm |
| RA58 | 24366221 | CF, 220 ohm |
| RA60 | 24366333 | CF, 33k ohm |
| RA61 | 24366392 | CF, 3900 ohm |
| RA64 | 24383510 | OMF, 51 ohm, 2W |
| RA65 | 24366103 | CF, 10k ohm |

| Location No. | Part No. | Description |
|--------------|----------|--------------------------|
| RA66 | 24366103 | CF, 10k ohm |
| RA68 | 24366472 | CF, 4700 ohm |
| RA69 | 24366392 | CF, 3900 ohm |
| RA70 | 24366472 | CF, 4700 ohm |
| RA76 | 24366153 | CF, 15k ohm |
| RA83 | 24366431 | CF, 430 ohm |
| RA87 | 24366333 | CF, 33k ohm |
| RA88 | 24366431 | CF, 430 ohm |
| RA89 | 24366563 | CF, 56k ohm |
| RA90 | 24366564 | CF, 560 ohm |
| RA91 | 24366561 | CF, 560 ohm |
| RA92 | 24366102 | CF, 1k ohm |
| RA93 | 24366123 | CF, 12k ohm |
| RB01 | 24366472 | CF, 4700 ohm |
| RB02 | 24366302 | CF, 3k ohm |
| RB04 | 24366103 | CF, 10k ohm |
| RB05 | 24366332 | CF, 3300 ohm |
| RB06 | 24366473 | CF, 47k ohm |
| R812 | 24366102 | CF, 1k ohm |
| R814 | 24366102 | CF, 1k ohm |
| R815 | 24366102 | CF, 1k ohm |
| RB22 | 24366183 | CF, 18k ohm |
| RB25 | 24945565 | CC, 5.6M ohm, ±10%, 1/4W |
| RB26 | 24945565 | CC, 5.6M ohm, ±10%, 1/4W |
| RB27 | 24945565 | CC, 5.6M ohm, ±10%, 1/4W |
| RB28 | 24945565 | CC, 5.6M ohm, ±10%, 1/4W |
| RD01 | 24000665 | FR, 15 ohm, 1/4W |
| RD02 | 24383100 | OMF, 10 ohm, 2W |
| RD03 | 24366562 | CF, 5600 ohm |
| RD05 | 24003924 | MF, 330 ohm, 1/4W |
| RD06 | 24366272 | CF, 2700 ohm |
| RD07 | 24366104 | CF, 100k ohm |
| RD08 | 24366203 | CF, 20k ohm |
| RD09 | 24366152 | CF, 1500 ohm |
| RD10 | 24366102 | CF, 1k ohm |
| RD11 | 24366224 | CF, 220k ohm |
| RD12 | 24366822 | CF, 8200 ohm |
| RD13 | 24366273 | CF, 27k ohm |
| RD14 | 24366103 | CF, 10k ohm |
| RD15 | 24366104 | CF, 100k ohm |
| RD16 | 24366752 | CF, 7500 ohm |
| RD17 | 24366223 | CF, 22k ohm |
| RD18 | 24366472 | CF, 4700 ohm |
| RD19 | 24366242 | CF, 2400 ohm |
| RD50 | 24066877 | VR, 5k ohm, 0.3W |
| RD51 | 24066875 | VR, 20k ohm, 0.3W |
| RM03 | 24366182 | CF, 1800 ohm |
| RM04 | 24366242 | CF, 2400 ohm |
| RM05 | 24366151 | CF, 150 ohm |
| RM06 | 24945475 | CC, 4.7M ohm, ±10%, 1/4W |
| RM26 | 24366333 | CF, 33k ohm |
| RN05 | 24366222 | CF, 2200 ohm |
| RN12 | 24366122 | CF, 1200 ohm |
| RN13 | 24366103 | CF, 10k ohm |
| RN14 | 24366103 | CF, 10k ohm |
| RN15 | 24366223 | CF, 22k ohm |
| RN16 | 24366333 | CF, 33k ohm |
| RN17 | 24366471 | CF, 470 ohm |
| RN18 | 24366201 | CF, 200 ohm |
| RN19 | 24366182 | CF, 1800 ohm |
| RN21 | 24366102 | CF, 1k ohm |
| RN22 | 24366333 | CF, 33k ohm |
| RN24 | 24366103 | CF, 10k ohm |
| RN25 | 24366304 | CF, 300k ohm |

| Location No. | Part No. | Description | Location No. | Part No. | Description |
|--------------|----------|--------------------|--------------|----------|-------------------|
| RN26 | 24366103 | CF, 10k ohm | RV30 | 24366223 | CF, 22k ohm |
| RN28 | 24366514 | CF, 510k ohm | RV31 | 24366101 | CF, 100 ohm |
| RN29 | 24366473 | CF, 47k ohm | RV32 | 24366332 | CF, 3300 ohm |
| RN30 | 24366473 | CF, 47k ohm | RV33 | 24366332 | CF, 3300 ohm |
| RN31 | 24366103 | CF, 10k ohm | RV34 | 24552750 | OMF, 75 ohm, 1/2W |
| RN32 | 24366392 | CF, 3900 ohm | RV35 | 24366101 | CF, 100 ohm |
| RN33 | 24366132 | CF, 1300 ohm | RV36 | 24366102 | CF, 1k ohm |
| RN34 | 24366273 | CF, 27k ohm | RV37 | 24366103 | CF, 10k ohm |
| RN40 | 24366821 | CF, 820 ohm | RV38 | 24366473 | CF, 47k ohm |
| RN41 | 24366103 | CF, 10k ohm | RV39 | 24366473 | CF, 47k ohm |
| RN42 | 24366103 | CF, 10k ohm | RV40 | 24366102 | CF, 1k ohm |
| RN43 | 24366222 | CF, 2200 ohm | RV41 | 24366102 | CF, 1k ohm |
| RN44 | 24366331 | CF, 330 ohm | RV42 | 24366223 | CF, 22k ohm |
| RS03 | 24366103 | CF, 10k ohm | RV43 | 24366223 | CF, 22k ohm |
| RS04 | 24366103 | CF, 10k ohm | RV44 | 24366103 | CF, 10k ohm |
| RS05 | 24366103 | CF, 10k ohm | RV45 | 24366820 | CF, 82 ohm |
| RS06 | 24366102 | CF, 1k ohm | RV46 | 24366820 | CF, 82 ohm |
| RS07 | 24366103 | CF, 10k ohm | RV66 | 24366910 | CF, 91 ohm |
| RS08 | 24366103 | CF, 10k ohm | RV68 | 24366473 | CF, 47k ohm |
| RS09 | 24366103 | CF, 10k ohm | RV69 | 24366102 | CF, 1k ohm |
| RS10 | 24366103 | CF, 10k ohm | RV70 | 24366473 | CF, 47k ohm |
| RS11 | 24366153 | CF, 15k ohm | RV71 | 24366102 | CF, 1k ohm |
| RS12 | 24366103 | CF, 10k ohm | RV72 | 24366103 | CF, 10k ohm |
| RS13 | 24366103 | CF, 10k ohm | RV73 | 24366180 | CF, 18 ohm |
| RS14 | 24366103 | CF, 10k ohm | RV74 | 24366473 | CF, 47k ohm |
| RS15 | 24366103 | CF, 10k ohm | RV75 | 24366102 | CF, 1k ohm |
| RS16 | 24366103 | CF, 10k ohm | RV76 | 24366473 | CF, 47k ohm |
| RS17 | 24366222 | CF, 2200 ohm | RV77 | 24366102 | CF, 1k ohm |
| RS18 | 24366103 | CF, 10k ohm | RV78 | 24366102 | CF, 1k ohm |
| RS19 | 24366103 | CF, 10k ohm | RV79 | 24366102 | CF, 1k ohm |
| RS20 | 24366473 | CF, 47k ohm | RX03 | 24366103 | CF, 10k ohm |
| RS21 | 24366473 | CF, 47k ohm | RX05 | 24366101 | CF, 100 ohm |
| RS22 | 24366223 | CF, 22k ohm | RX06 | 24366681 | CF, 680 ohm |
| RS23 | 24366473 | CF, 47k ohm | RX09 | 24366681 | CF, 680 ohm |
| RS24 | 24366473 | CF, 47k ohm | RX13 | 24366102 | CF, 1k ohm |
| RS25 | 24552101 | OMF, 100 ohm, 1/2W | RX16 | 24366152 | CF, 1500 ohm |
| RS26 | 24366223 | CF, 22k ohm | RX17 | 24366152 | CF, 1500 ohm |
| RS27 | 24366273 | CF, 27k ohm | RX18 | 24366683 | CF, 68k ohm |
| RS28 | 24366103 | CF, 10k ohm | RX19 | 24366222 | CF, 2200 ohm |
| RS29 | 24366222 | CF, 2200 ohm | RX20 | 24366473 | CF, 47k ohm |
| RS30 | 24366222 | CF, 2200 ohm | RX27 | 24366103 | CF, 10k ohm |
| RS31 | 24366222 | CF, 2200 ohm | RX29 | 24366103 | CF, 10k ohm |
| RS32 | 24366103 | CF, 10k ohm | RX31 | 24366103 | CF, 10k ohm |
| RS33 | 24366103 | CF, 10k ohm | RX32 | 24366103 | CF, 10k ohm |
| RS34 | 24366134 | CF, 130k ohm | RX33 | 24366473 | CF, 47k ohm |
| RV03 | 24366101 | CF, 100 ohm | RX34 | 24366224 | CF, 220k ohm |
| RV04 | 24366102 | CF, 1k ohm | RX35 | 24366473 | CF, 47k ohm |
| RV05 | 24366103 | CF, 10k ohm | RX36 | 24366101 | CF, 100 ohm |
| RV06 | 24366101 | CF, 100 ohm | RX37 | 24366273 | CF, 27k ohm |
| RV12 | 24366101 | CF, 100 ohm | RX38 | 24366473 | CF, 47k ohm |
| RV13 | 24366473 | CF, 47k ohm | RX39 | 24366102 | CF, 1k ohm |
| RV15 | 24366223 | CF, 22k ohm | RX40 | 24366102 | CF, 1k ohm |
| RV16 | 24366223 | CF, 22k ohm | RZ01 | 24366112 | CF, 1100 ohm |
| RV17 | 24366102 | CF, 1k ohm | RZ02 | 24366122 | CF, 1200 ohm |
| RV18 | 24366473 | CF, 47k ohm | RZ03 | 24366332 | CF, 3300 ohm |
| RV19 | 24366104 | CF, 100k ohm | RZ04 | 24366103 | CF, 10k ohm |
| RV21 | 24366102 | CF, 1k ohm | RZ05 | 24366222 | CF, 2200 ohm |
| RV22 | 24366681 | CF, 680 ohm | RZ06 | 24366101 | CF, 100 ohm |
| RV24 | 24366222 | CF, 2200 ohm | RZ08 | 24366102 | CF, 1k ohm |
| RV25 | 24366222 | CF, 2200 ohm | RZ09 | 24366103 | CF, 10k ohm |
| RV26 | 24366102 | CF, 1k ohm | RZ10 | 24366103 | CF, 10k ohm |
| RV27 | 24366473 | CF, 47k ohm | RZ11 | 24366471 | CF, 470 ohm |
| RV28 | 24366103 | CF, 10k ohm | RZ13 | 24366104 | CF, 100k ohm |
| RV29 | 24366103 | CF, 10k ohm | RZ14 | 24366102 | CF, 1k ohm |

| Location No. | Part No. | Description |
|---------------------------------|----------|------------------------------------|
| RZ15 | 24366471 | CF, 470 ohm |
| COILS & TRANSFORMERS | | |
| L181 | 23261985 | Coil, RF Choke, TRF9221 |
| L203 | 23238914 | Coil, Peaking, TRF4470AC |
| L241 | 23238923 | Coil, Peaking, TRF4829AC |
| L270 | 23238928 | Coil, Peaking, TRF4339AC |
| L311 | 23261974 | Coil, Choke, HC5-035 |
| L410 | 23238710 | Coil, Peaking, TRF4220AJ |
| L411 | 23103859 | Coil (Ferrite Bead), TEM2011 |
| L412 | 23103859 | Coil (Ferrite Bead), TEM2011 |
| L413 | 23233089 | Coil, Linearity, TLN2137 |
| △ L462 | 23227269 | Deflection Yoke, TDY-628DB |
| L463 | 23221684 | Coil, Choke, TLN3191D |
| L465 | 23221894 | Coil, Choke, TLN3063 |
| L503 | 23238922 | Coil, Peaking, TRF4100AC |
| L551 | 23250972 | Coil, 1H-Delay Matching, TRF5418D |
| L580 | 23238562 | Coil, Peaking, TRF4109AJ |
| L590 | 23237978 | Coil, Peaking, TRF4560AC |
| L593 | 70131039 | Coil, Signal Line, ZBF503D-00 |
| L671 | 23262739 | Coil, IF, TRF1126D |
| L672 | 23262739 | Coil, IF, TRF1126D |
| L673 | 23238918 | Coil, Peaking, TRF4220AC |
| L674 | 23232946 | Coil, Variable, TRF3073D |
| L675 | 23238511 | Coil, Peaking, TRF4221AJ |
| L802 | 23221076 | Coil, Choke, TLN1015R |
| L803 | 23261975 | Coil, Choke, TRF9229 |
| L804 | 23261975 | Coil, Choke, TRF9229 |
| L805 | 23222694 | Coil, Width, TLN2026 |
| L806 | 23103859 | Coil (Ferrite Bead), TEM2011 |
| L808 | 23222694 | Coil, Width, TLN2026 |
| L810 | 23222694 | Coil, Width, TLN2026 |
| L811 | 23103859 | Coil (Ferrite Bead), TEM2011 |
| L812 | 23238714 | Coil, Peaking, TRF4100AJ |
| L813 | 23103859 | Coil (Ferrite Bead), TEM2011 |
| L814 | 23103859 | Coil (Ferrite Bead), TEM2011 |
| △ L901 | 23200755 | Coil, Degaussing, TSB2206A |
| LA01 | 23238562 | Coil, Peaking, TRF4109AJ |
| LA03 | 23221937 | Coil, Choke, TLN3040 |
| LB01 | 23262778 | Coil, IF, TRF1112 |
| LD02 | 23221885 | Coil, Choke, TLN3072 |
| LD03 | 23103940 | Coil (Ferrite Bead), TEM2001 |
| LM01 | 23262797 | Coil, IF, TRF1093D |
| LM02 | 23250865 | Coil, IF, TRF5414DA |
| LM03 | 23250865 | Coil, IF, TRF5414DA |
| LM04 | 23262798 | Coil, IF, TRF1092D |
| LN02 | 23238920 | Coil, Peaking, TRF4150AC |
| LN03 | 23238918 | Coil, Peaking, TRF4220AC |
| LN40 | 23238921 | Coil, Peaking, TRF4120AC |
| LN41 | 23237986 | Coil, Peaking, TRF4120AC |
| LV02 | 23238918 | Coil, Peaking, TRF4220AC |
| LZ01 | 23238923 | Coil, Peaking, TRF4829AC |
| T181 | 23262895 | Coil, PIF Trap, TRF1441 |
| T182 | 23262843 | Coil, PIF Trap, TRF1457D |
| △ T401 | 23224915 | Transformer, Horiz. Drive, TLN1068 |
| △ T461 | 23236234 | Transformer, Flyback, TFB4092AD |
| T801 | 23211857 | Line Filter, TRF3138 |
| T802 | 23211857 | Line Filter, TRF3138 |
| △ T803 | 23213506 | Transformer, Converter, TPW3152A |

| Location No. | Part No. | Description |
|-----------------------|----------|----------------------------------|
| T804 | 23224917 | Transformer, Separation, TLN2122 |
| SEMICONDUCTORS | | |
| IC303 | 23119142 | IC, AN5521 |
| IC405 | 23318218 | IC, μ PC7812H |
| IC501 | B0379470 | IC, TA8659N |
| IC604 | B0356190 | IC, TA7630P |
| IC605 | B0376856 | IC, TA8211AH |
| IC670 | B0379150 | IC, TA8615N |
| IC674 | B0325290 | IC, TA7337P |
| IC803 | 23318411 | IC, TEA2164 |
| IC806 | 23318299 | IC, L78MR05-FA |
| IC807 | 23318412 | IC, TEA5170 |
| ICA01 | 23318445 | IC, M50436-688SP |
| ICA02 | 23119182 | IC, μ PD6336C |
| ICA03 | 23318482 | IC, M6M80011AP |
| ICA04 | 23119441 | IC, LA7910 |
| ICS02 | B0350000 | IC, TA75458P |
| ICS03 | B0350000 | IC, TA75458P |
| ICV01 | B0383505 | IC, TA8720AN |
| ICZ01 | B0470532 | IC, TC4053BP |
| Q171 | A6317440 | Transistor, 2SC1815N-Y |
| Q181 | A6708871 | Transistor, 2SC388ATM |
| Q204 | A6317440 | Transistor, 2SC1815N-Y |
| Q205 | A6317440 | Transistor, 2SC1815N-Y |
| Q240 | A6534040 | Transistor, 2SA1015-Y |
| Q241 | A6319300 | Transistor, 2SC1959N-Y |
| Q301 | A6317480 | Transistor, 2SC1815N-BL |
| Q302 | A6317440 | Transistor, 2SC1815N-Y |
| Q304 | A6317440 | Transistor, 2SC1815N-Y |
| Q305 | A6317440 | Transistor, 2SC1815N-Y |
| Q402 | A678971D | Transistor, 2SC1569 FA-5 |
| △ Q404 | A6872801 | Transistor, 2SD2253 |
| Q406 | A6317440 | Transistor, 2SC1815N-Y |
| Q502 | A6534040 | Transistor, 2SA1015-Y |
| Q503 | A6534040 | Transistor, 2SA1015-Y |
| Q505 | A6363200 | Transistor, 2SC3619 |
| Q506 | A6317440 | Transistor, 2SC1815N-Y |
| Q507 | A6363200 | Transistor, 2SC3619 |
| Q508 | A6317440 | Transistor, 2SC1815N-Y |
| Q509 | A6363200 | Transistor, 2SC3619 |
| Q510 | A6317440 | Transistor, 2SC1815N-Y |
| Q514 | A6509120 | Transistor, 2SA562TM-O |
| Q516 | A6321240 | Transistor, 2SC2120-Y |
| Q570 | A6317460 | Transistor, 2SC1815-GR |
| Q601 | A6534040 | Transistor, 2SA1015-Y |
| Q602 | A6342200 | Transistor, 2SC2878-A |
| Q603 | A6342200 | Transistor, 2SC2878-A |
| Q606 | A6317440 | Transistor, 2SC1815N-Y |
| Q607 | A6317440 | Transistor, 2SC1815N-Y |
| Q608 | A6317440 | Transistor, 2SC1815N-Y |
| Q609 | A6317440 | Transistor, 2SC1815N-Y |
| Q671 | A6317440 | Transistor, 2SC1815N-Y |
| Q672 | A6317440 | Transistor, 2SC1815N-Y |
| Q673 | A6509140 | Transistor, 2SA562TMY |
| Q675 | A6317440 | Transistor, 2SC1815N-Y |
| Q681 | A6317440 | Transistor, 2SC1815N-Y |
| Q801 | 23314519 | Transistor (STR), STR81145L501 |
| Q804 | A6366908 | Transistor, 2SC4288A FA-1 |
| Q805 | A6533749 | Transistor, 2SA1013-R(C) |
| Q808 | A7804500 | SCR, SF5J42 |
| Q809 | A6317440 | Transistor, 2SC1815N-Y |

| Location No. | Part No. | Description | Location No. | Part No. | Description |
|--------------|----------|--------------------------|--------------|----------|------------------------|
| Q810 | A6328333 | Transistor, 2SC2383-Y(C) | D406 | A7978850 | Diode, S5295G |
| Q811 | A6534040 | Transistor, 2SA1015-Y | D408 | 23118052 | Diode, RU4Z |
| Q814 | A6546310 | Transistor, 2SA1297Y | D410 | A7116815 | Diode, Zener, 04AZ8.2Y |
| Q815 | A6317440 | Transistor, 2SC1815N-Y | D570 | A7150258 | Diode, 1SS176 |
| Q816 | A6867980 | Transistor, 2SD1405-V | D571 | A7150258 | Diode, 1SS176 |
| Q817 | A6321240 | Transistor, 2SC2120-Y | D572 | A7150258 | Diode, 1SS176 |
| QA05 | A6534040 | Transistor, 2SA1015-Y | D573 | A7150258 | Diode, 1SS176 |
| QA14 | A6317440 | Transistor, 2SC1815N-Y | D580 | A7150258 | Diode, 1SS176 |
| QA17 | A6317440 | Transistor, 2SC1815N-Y | D581 | A7150258 | Diode, 1SS176 |
| QA19 | A6317440 | Transistor, 2SC1815N-Y | D582 | A7150258 | Diode, 1SS176 |
| QA22 | A6534040 | Transistor, 2SA1015-Y | D594 | A7150258 | Diode, 1SS176 |
| QA26 | A6534040 | Transistor, 2SA1015-Y | D595 | A7150258 | Diode, 1SS176 |
| QB01 | A6317440 | Transistor, 2SC1815N-Y | D596 | A7150258 | Diode, 1SS176 |
| QB02 | A6317440 | Transistor, 2SC1815N-Y | D601 | A7150258 | Diode, 1SS176 |
| QD01 | A6533730 | Transistor, 2SA1012-Y | D602 | A7150258 | Diode, 1SS176 |
| QD02 | 23114528 | Transistor, 2SC1740S-Q | D603 | A7150258 | Diode, 1SS176 |
| QD03 | 23114530 | Transistor, 2SA933S-Q | D604 | A7150258 | Diode, 1SS176 |
| QD04 | A6342200 | Transistor, 2SC2878-A | D605 | A7150258 | Diode, 1SS176 |
| QN01 | A6002060 | Transistor, RN1206 | D606 | A7150258 | Diode, 1SS176 |
| QN02 | A6534040 | Transistor, 2SA1015-Y | D607 | A7150258 | Diode, 1SS176 |
| QN03 | A6534040 | Transistor, 2SA1015-Y | D608 | A7150258 | Diode, 1SS176 |
| QN04 | A6317440 | Transistor, 2SC1815N-Y | D609 | A7150258 | Diode, 1SS176 |
| QN05 | A6317440 | Transistor, 2SC1815N-Y | D610 | A7150258 | Diode, 1SS176 |
| QN06 | A6002040 | Transistor, RN1204 | D670 | A7150258 | Diode, 1SS176 |
| QN07 | A6317440 | Transistor, 2SC1815N-Y | D671 | A7150258 | Diode, 1SS176 |
| QN08 | A6002040 | Transistor, RN1204 | D672 | A7150258 | Diode, 1SS176 |
| QN09 | A6317440 | Transistor, 2SC1815N-Y | D673 | A7288601 | Diode, 1S2186 FA-1 |
| QN10 | A6317440 | Transistor, 2SC1815N-Y | D674 | A7150258 | Diode, 1SS176 |
| QN11 | A6002040 | Transistor, RN1204 | D675 | A7150258 | Diode, 1SS176 |
| QN40 | A6317440 | Transistor, 2SC1815N-Y | D676 | A7150258 | Diode, 1SS176 |
| QS04 | A6317440 | Transistor, 2SC1815N-Y | D801 | A7568200 | Diode, 1S1832 |
| QS05 | A6342200 | Transistor, 2SC2878-A | D802 | A7568200 | Diode, 1S1832 |
| QS06 | A6317440 | Transistor, 2SC1815N-Y | D803 | 23316275 | Diode, R8V606 LF-A |
| QS07 | A6317440 | Transistor, 2SC1815N-Y | D804 | A7117815 | Diode, Zener, 04AZ22Y |
| QS08 | A6317440 | Transistor, 2SC1815N-Y | D807 | A7978850 | Diode, S5295G |
| QV02 | A6002040 | Transistor, RN1204 | D808 | A7978850 | Diode, S5295G |
| QV03 | A6342200 | Transistor, 2SC2878-A | D809 | A7978850 | Diode, S5295G |
| QV04 | A6534040 | Transistor, 2SA1015-Y | D810 | A7568300 | Diode, 1S1835 |
| QV05 | A6317440 | Transistor, 2SC1815N-Y | D811 | A7117415 | Diode, Zener, 04AZ15Y |
| QV06 | A6534040 | Transistor, 2SA1015-Y | D812 | A7978850 | Diode, S5295G |
| QV07 | A6342200 | Transistor, 2SC2878-A | D813 | A7978850 | Diode, S5295G |
| QV08 | A6317440 | Transistor, 2SC1815N-Y | D814 | A7978850 | Diode, S5295G |
| QX01 | A6317440 | Transistor, 2SC1815N-Y | D815 | A7978850 | Diode, S5295G |
| QX02 | A6734585 | Transistor, 2SC752GTM-O | D816 | A7978850 | Diode, S5295G |
| QX06 | A6534040 | Transistor, 2SA1015-Y | D817 | 23118451 | Diode, RU4A |
| QX07 | A6317440 | Transistor, 2SC1815N-Y | D818 | 23118338 | Diode, RU4AM |
| QX08 | A6002040 | Transistor, RN1204 | D819 | A7568300 | Diode, 1S1835 |
| QX09 | A6002060 | Transistor, RN1206 | D820 | A7116615 | Diode, Zener, 04AZ6.8Y |
| QZ02 | A6534040 | Transistor, 2SA1015-Y | D821 | A7150258 | Diode, 1SS176 |
| QZ03 | A6342200 | Transistor, 2SC2878-A | D822 | A7275400 | Diode, 1S2462 |
| D181 | A7288601 | Diode, 1S2186 FA-1 | D824 | A7150258 | Diode, 1SS176 |
| D182 | A7288601 | Diode, 1S2186 FA-1 | D826 | A7568300 | Diode, 1S1835 |
| D183 | A7288601 | Diode, 1S2186 FA-1 | D828 | 23118052 | Diode, RU4Z |
| D241 | A7150041 | Diode, 1SS104 | D830 | A7150258 | Diode, 1SS176 |
| D302 | A7568250 | Diode, 1S1834 | D832 | A7116615 | Diode, Zener, 04AZ6.8Y |
| D303 | 23118977 | Diode, ERC01-02FL | D833 | A7978850 | Diode, S5295G |
| D315 | A7116715 | Diode, Zener, 04AZ7.5Y | D834 | A7116615 | Diode, Zener, 04AZ6.8Y |
| D317 | A7150258 | Diode, 1SS176 | D841 | A7116415 | Diode, Zener, 04AZ5.6Y |
| D320 | A7150258 | Diode, 1SS176 | DA01 | A7150258 | Diode, 1SS176 |
| D321 | A7150258 | Diode, 1SS176 | DA02 | A7150258 | Diode, 1SS176 |
| D340 | A7150258 | Diode, 1SS176 | DA03 | A7150258 | Diode, 1SS176 |
| D401 | A7116925 | Diode, Zener, 04AZ9.1Z | DA04 | A7150258 | Diode, 1SS176 |
| D402 | A7117215 | Diode, Zener, 04AZ12Y | DA05 | A7150258 | Diode, 1SS176 |
| D405 | A7117715 | Diode, Zener, 04AZ20Y | DA06 | A7150258 | Diode, 1SS176 |

| Location No. | Part No. | Description |
|----------------------|----------|--------------------------------------|
| DA08 | A7150258 | Diode, 1SS176 |
| DA09 | A7150258 | Diode, 1SS176 |
| DA10 | 23115878 | Diode, Zener, μ PC574J(L) |
| DA11 | A7150258 | Diode, 1SS176 |
| DA12 | A7150258 | Diode, 1SS176 |
| DA14 | A7150258 | Diode, 1SS176 |
| DA15 | A7150258 | Diode, 1SS176 |
| DA16 | A7150258 | Diode, 1SS176 |
| DA20 | A7150258 | Diode, 1SS176 |
| DA55 | A8606431 | Diode (LED), TLG153, Green |
| DB10 | A7150258 | Diode, 1SS176 |
| DD01 | A7568460 | Diode, TVR-1B |
| DD02 | 23118943 | Diode, ERC20-04 |
| DD03 | A7568752 | Diode, 1S1887A |
| DD04 | A7150258 | Diode, 1SS176 |
| DD05 | A7150258 | Diode, 1SS176 |
| DD06 | A7150258 | Diode, 1SS176 |
| DE55 | A8636541 | Diode (LED), TLS153, Red |
| DN06 | A7288601 | Diode, 1S2186 FA-1 |
| DN07 | A7288601 | Diode, 1S2186 FA-1 |
| DS55 | A8608781 | Diode (LED), TLY153, Yellow |
| DV01 | A7150258 | Diode, 1SS176 |
| DV03 | A7150258 | Diode, 1SS176 |
| DV05 | A7116915 | Diode, Zener, 04AZ9.1Y |
| DV06 | A7150258 | Diode, 1SS176 |
| DX03 | A7150258 | Diode, 1SS176 |
| DX04 | A7150258 | Diode, 1SS176 |
| MISCELLANEOUS | | |
| △ F801 | 23144867 | Fuse, 4.0A |
| F801A | 23165102 | Fuse Holder |
| K901 | 23120303 | Remote Sensor, IR-9109-K |
| L462A | 23993726 | Compensator, DY, YH |
| L462B | 23993622 | Compensator, DY, TC-M |
| P003 | 23161701 | Terminal, 4P |
| P270 | 23845834 | Clamp |
| P661 | 23363607 | Headphone Jack, 3.5mm |
| △ P801 | 23176594 | Power Cord |
| PV01 | 23365597 | Phono Jack, 6P |
| PV02B | 23901837 | Socket, 3P |
| PV05B | 23901836 | Socket, 4P |
| PV06 | 23367681 | Plug, 8P |
| PV07 | 23367681 | Plug, 8P |
| PV40 | 23365361 | Jack, 4P |
| S001 | 23145412 | Switch, Slide, 2C2P |
| S201 | 23145538 | Switch, Push, 2C1P |
| S202 | 23145682 | Switch, Lever, 1C3P |
| S301 | 23145542 | Switch, Lever, 1C3P |
| S601 | 23145318 | Switch, Slide, 2C3P |
| △ S801 | 23145434 | Switch, Power, 2C2P |
| SA01 | 23145430 | Switch, Push, 1C1P |
| SA02 | 23145430 | Switch, Push, 1C1P |
| SA03 | 23145430 | Switch, Push, 1C1P |
| SA04 | 23145430 | Switch, Push, 1C1P |
| SA05 | 23145430 | Switch, Push, 1C1P |
| SA06 | 23145430 | Switch, Push, 1C1P |
| SA11 | 23145430 | Switch, Push, 1C1P |
| △ V901A | 23902019 | Socket, CRT, 10P |
| V901C | 23192818 | Sticker, Z2013A |
| V901M | 23102893 | Magnet, Purity-Convergence, MAG-1037 |
| W201 | 23250875 | Delay Line, TRF2080 |


| Location No. | Part No. | Description |
|------------------------------|----------|--|
| W661 | 23151258 | Speaker, SPK-1258, 70x130mm, 8 ohm |
| W662 | 23151258 | Speaker, SPK-1258, 70x130mm, 8 ohm |
| X401 | 23153886 | Ceramic Resonator, 503kHz, TCR1012 |
| X501 | 23153979 | Crystal, 4.43MHz |
| X502 | 23153797 | 1H-Delay Line, PAL/SECAM, ED645A41T |
| XN01 | 23153961 | Crystal, 3.58MHz |
| Z240 | 23107658 | Ceramic Video Trap, 5.74MHz, TCF1052 |
| Z241 | 23107911 | Ceramic Video Trap, 5.5 to 6MHz, TCF1019 |
| Z671 | 23107947 | Ceramic Filter, 5.5MHz, SFE5.5MBF |
| Z672 | 23107948 | Ceramic Filter, 6.0MHz, SFE6.0MBF |
| Z673 | 23107949 | Ceramic Filter, 6.5MHz, SFE6.5MBF |
| Z674 | 23153900 | Ceramic Resonator, 500kHz, TCR1010 |
| Z675 | 23107948 | Ceramic Filter, 6.0MHz, SFE6.0MBF |
| Z676 | 23107980 | Ceramic Filter, 4.5MHz, SFE4.5MB |
| ZA01 | 23153845 | Ceramic Resonator, 4MHz, TCR1015 |
| ZA02 | 24094651 | Capacitor Block, 100pF \times 4, 50V |
| ZN01 | 23107913 | Ceramic Video Trap, 6.5MHz, TCF1018 |
| ZN04 | 23107976 | Ceramic Video Trap, 4.5MHz, TPS4.5MC2 |
| ZZ01 | 23107502 | Filter, Glass Comb, UGL-310KNT |
| ZZ02 | 23107849 | Ceramic Video Trap, 4.43MHz, TCF1032 |
| PC BOARD ASSEMBLIES | | |
| U902 | 23337511 | Main Board, PB0985 |
| U903A | 23337516 | Back Terminal Board, PB0987-1 |
| U904A | 23337512 | CRT Drive Board, PB0986-1 |
| U904B | 23337513 | Audio Board, PB0986-2 |
| U904C | 23337515 | Power Board, PB0986-3 |
| U904D | 23337517 | System Board, PB0986-4 |
| PICTURE TUBE | | |
| △ V901 | A5580639 | Picture Tube, A66KHP96X, SVC |
| TUNER | | |
| H001 | 23121729 | Tuner, VHF/UHF, EG444V |
| REMOTE HAND SET PARTS | | |
| K902 | 23120601 | Remote Hand Unit, CT-9430 |
| AT01 | 23304078 | Upper Case |
| AT02 | 23300919 | Lower Case |
| AT03 | 23300920 | Battery Cover |
| AT04 | 23300921 | Filter |
| ST01 | 23300937 | Rubber Sheet |
| UT01 | 23335539 | PC Board, PW6994 |

| Location No. | Part No. | Description |
|--------------|----------|----------------------------------|
| ZT01 | 23153736 | Ceramic Resoantor, CSB455EB20 |

| Location No. | Part No. | Description |
|--------------|----------|-------------|
| | | |


MAIN BOARD PB0985

BOTTOM (FOIL) SIDE

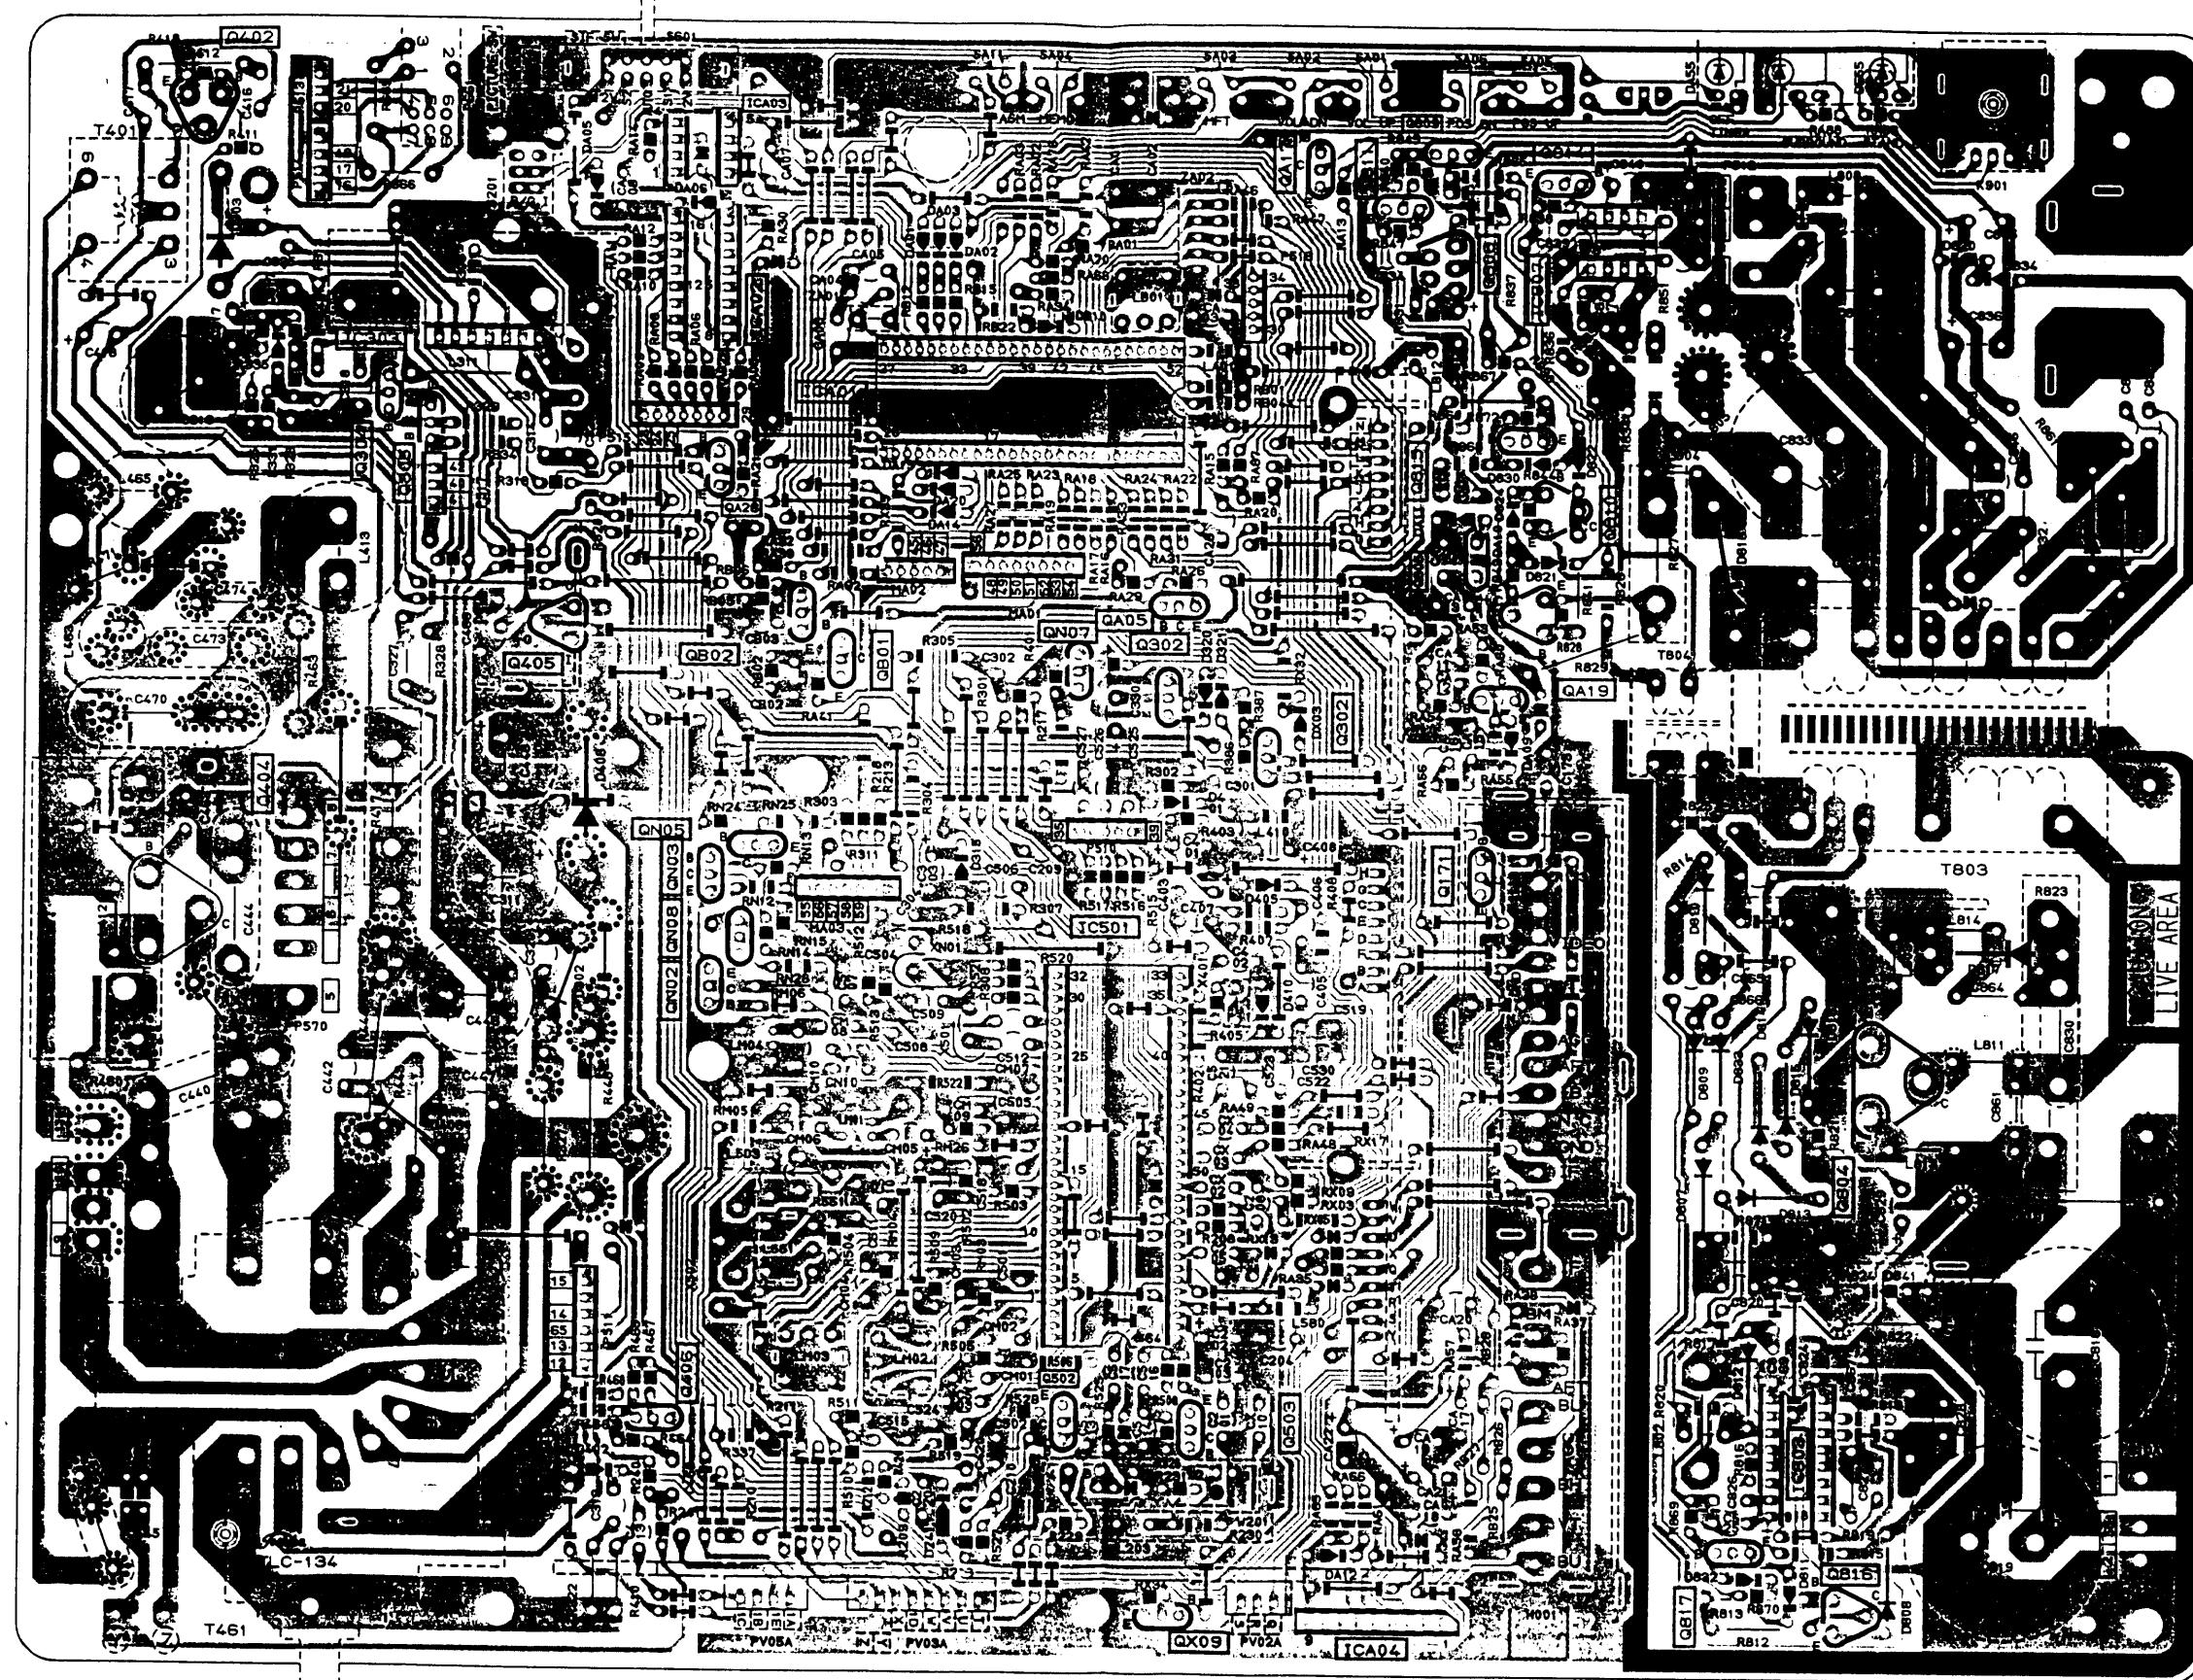


BACK TERMINAL BOARD PB0987

BOTTOM (FOIL) SIDE

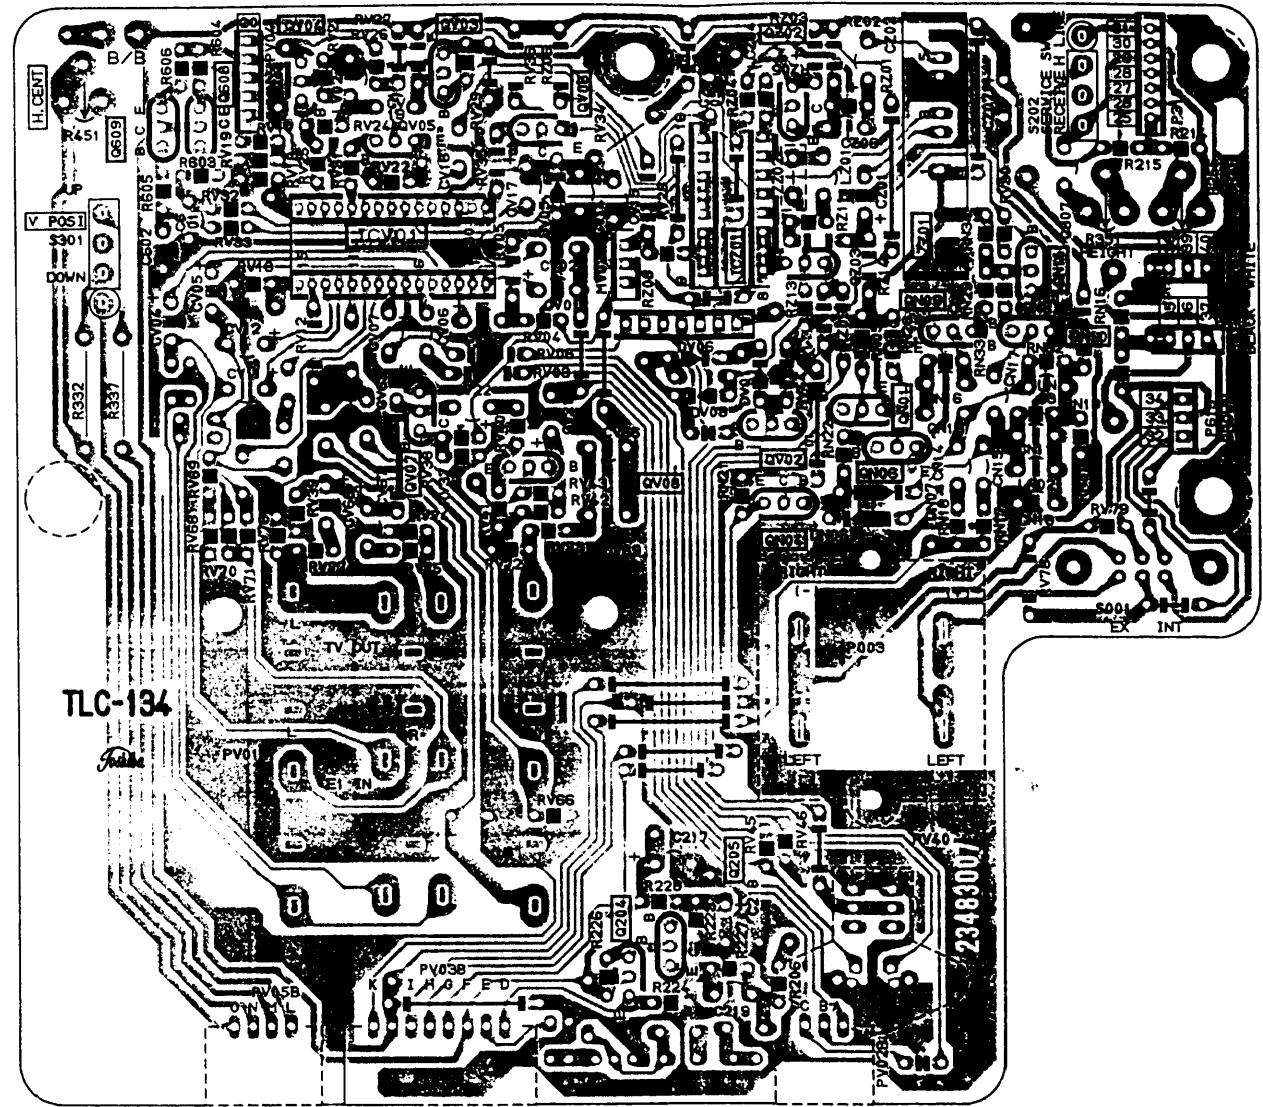


SYSTEM BOARD PB0986-4

BOTTOM (FOIL) SIDE

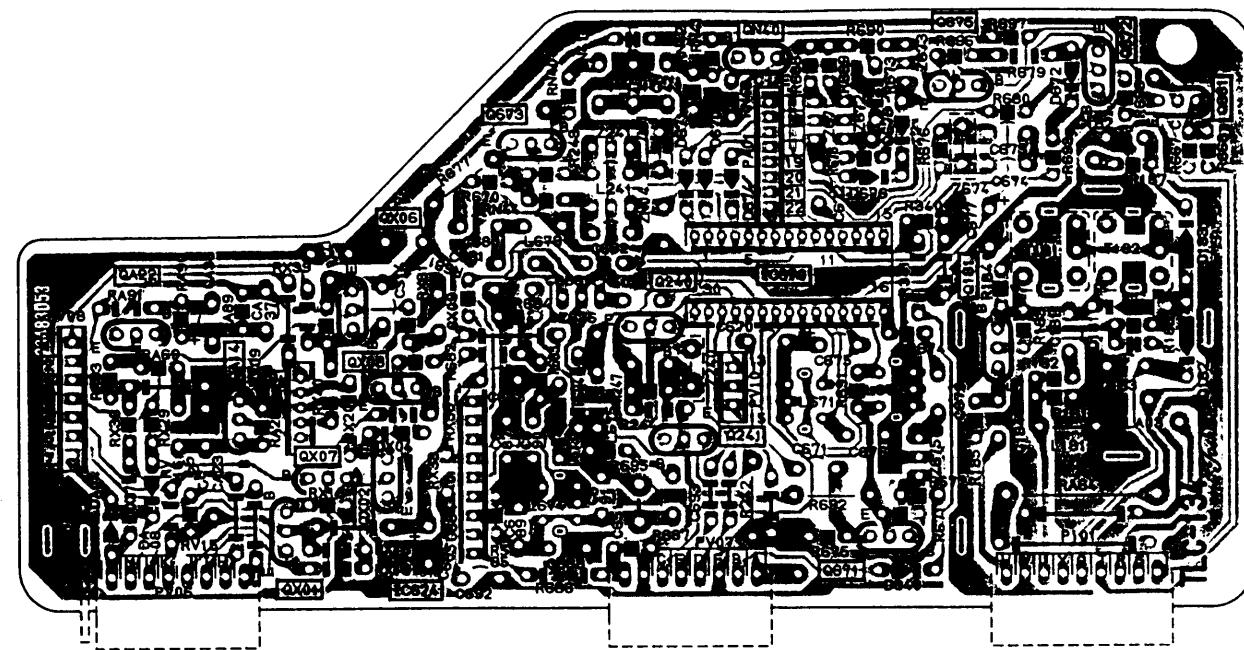


CRT DRIVE BOARD PB0986-1

BOTTOM (FOIL) SIDE

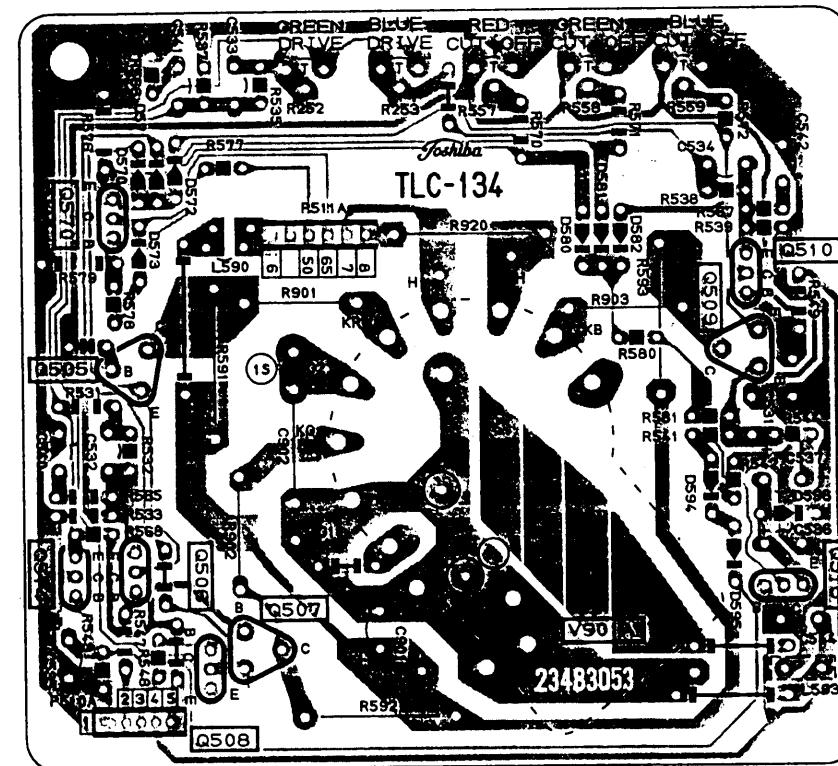


DPC/AUDIO BOARD PB0986-2

BOTTOM (FOIL) SIDE

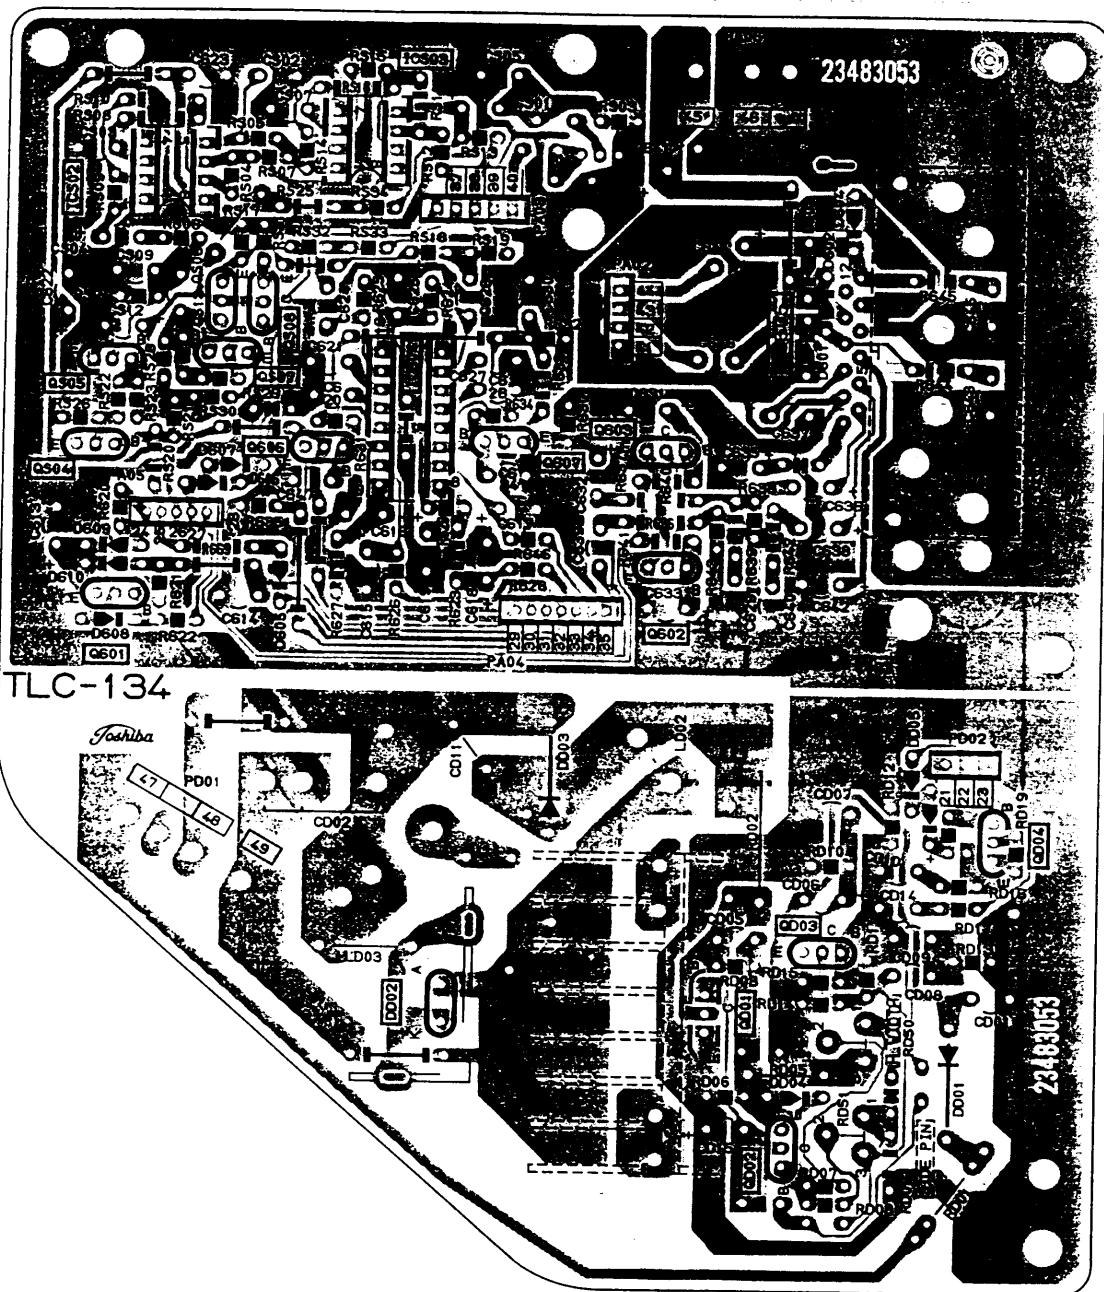

POWER BOARD PB0986-3
BOTTOM (FOIL) SIDE

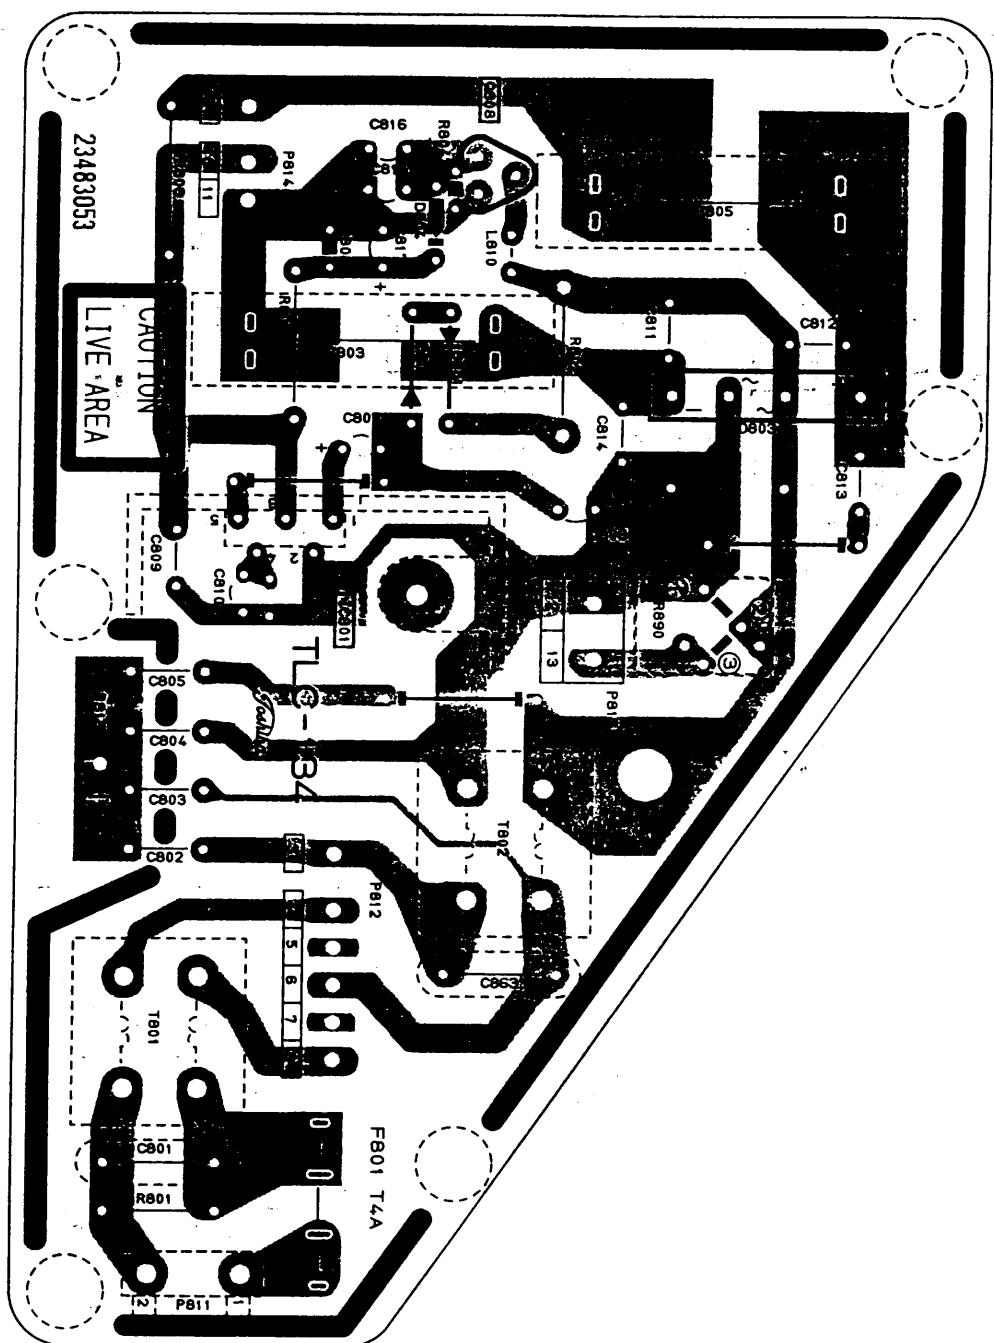

TERMINAL VIEW OF TRANSISTORS

- ① 2SA1015
 2SC388ATM
 2SC1815
 2SA562TM
 2SC1959
 2SC1627
 2SC2878




- ② 2SC2120
 2SC2230
 2SC2655




- ③ RN1203
 RN1204
 RN1206




- ④ 2SA1265N

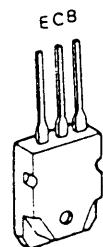


- ⑤ 2SD553
 2SC1569
 2SC2383
 2SC3148
 2SA1012

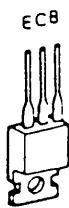


- ⑥ 2SC3619

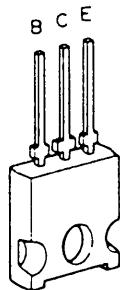

- ⑦ 2SD1428

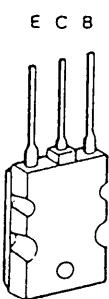

- ⑧ SF5J42

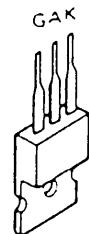

(SCR)

SCHEMATIC DIAGRAM

MODEL 2806XH


NOTE: The parts identified by the international hazard symbols are critical for safety. Replace only with part number specified.


OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal.
2. Voltages reading may vary $\pm 20\%$.
3. The schematic shown is representative only.
4. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
5. Check FINE TUNING, BRIGHTNESS, CONTRAST and COLOUR controls for best picture, make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position.
6. Waveforms are taken using a standard colour bar signal.

NOTES:

1. D.C. resistance value of a principal transformer is shown in the schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. : Solder links.

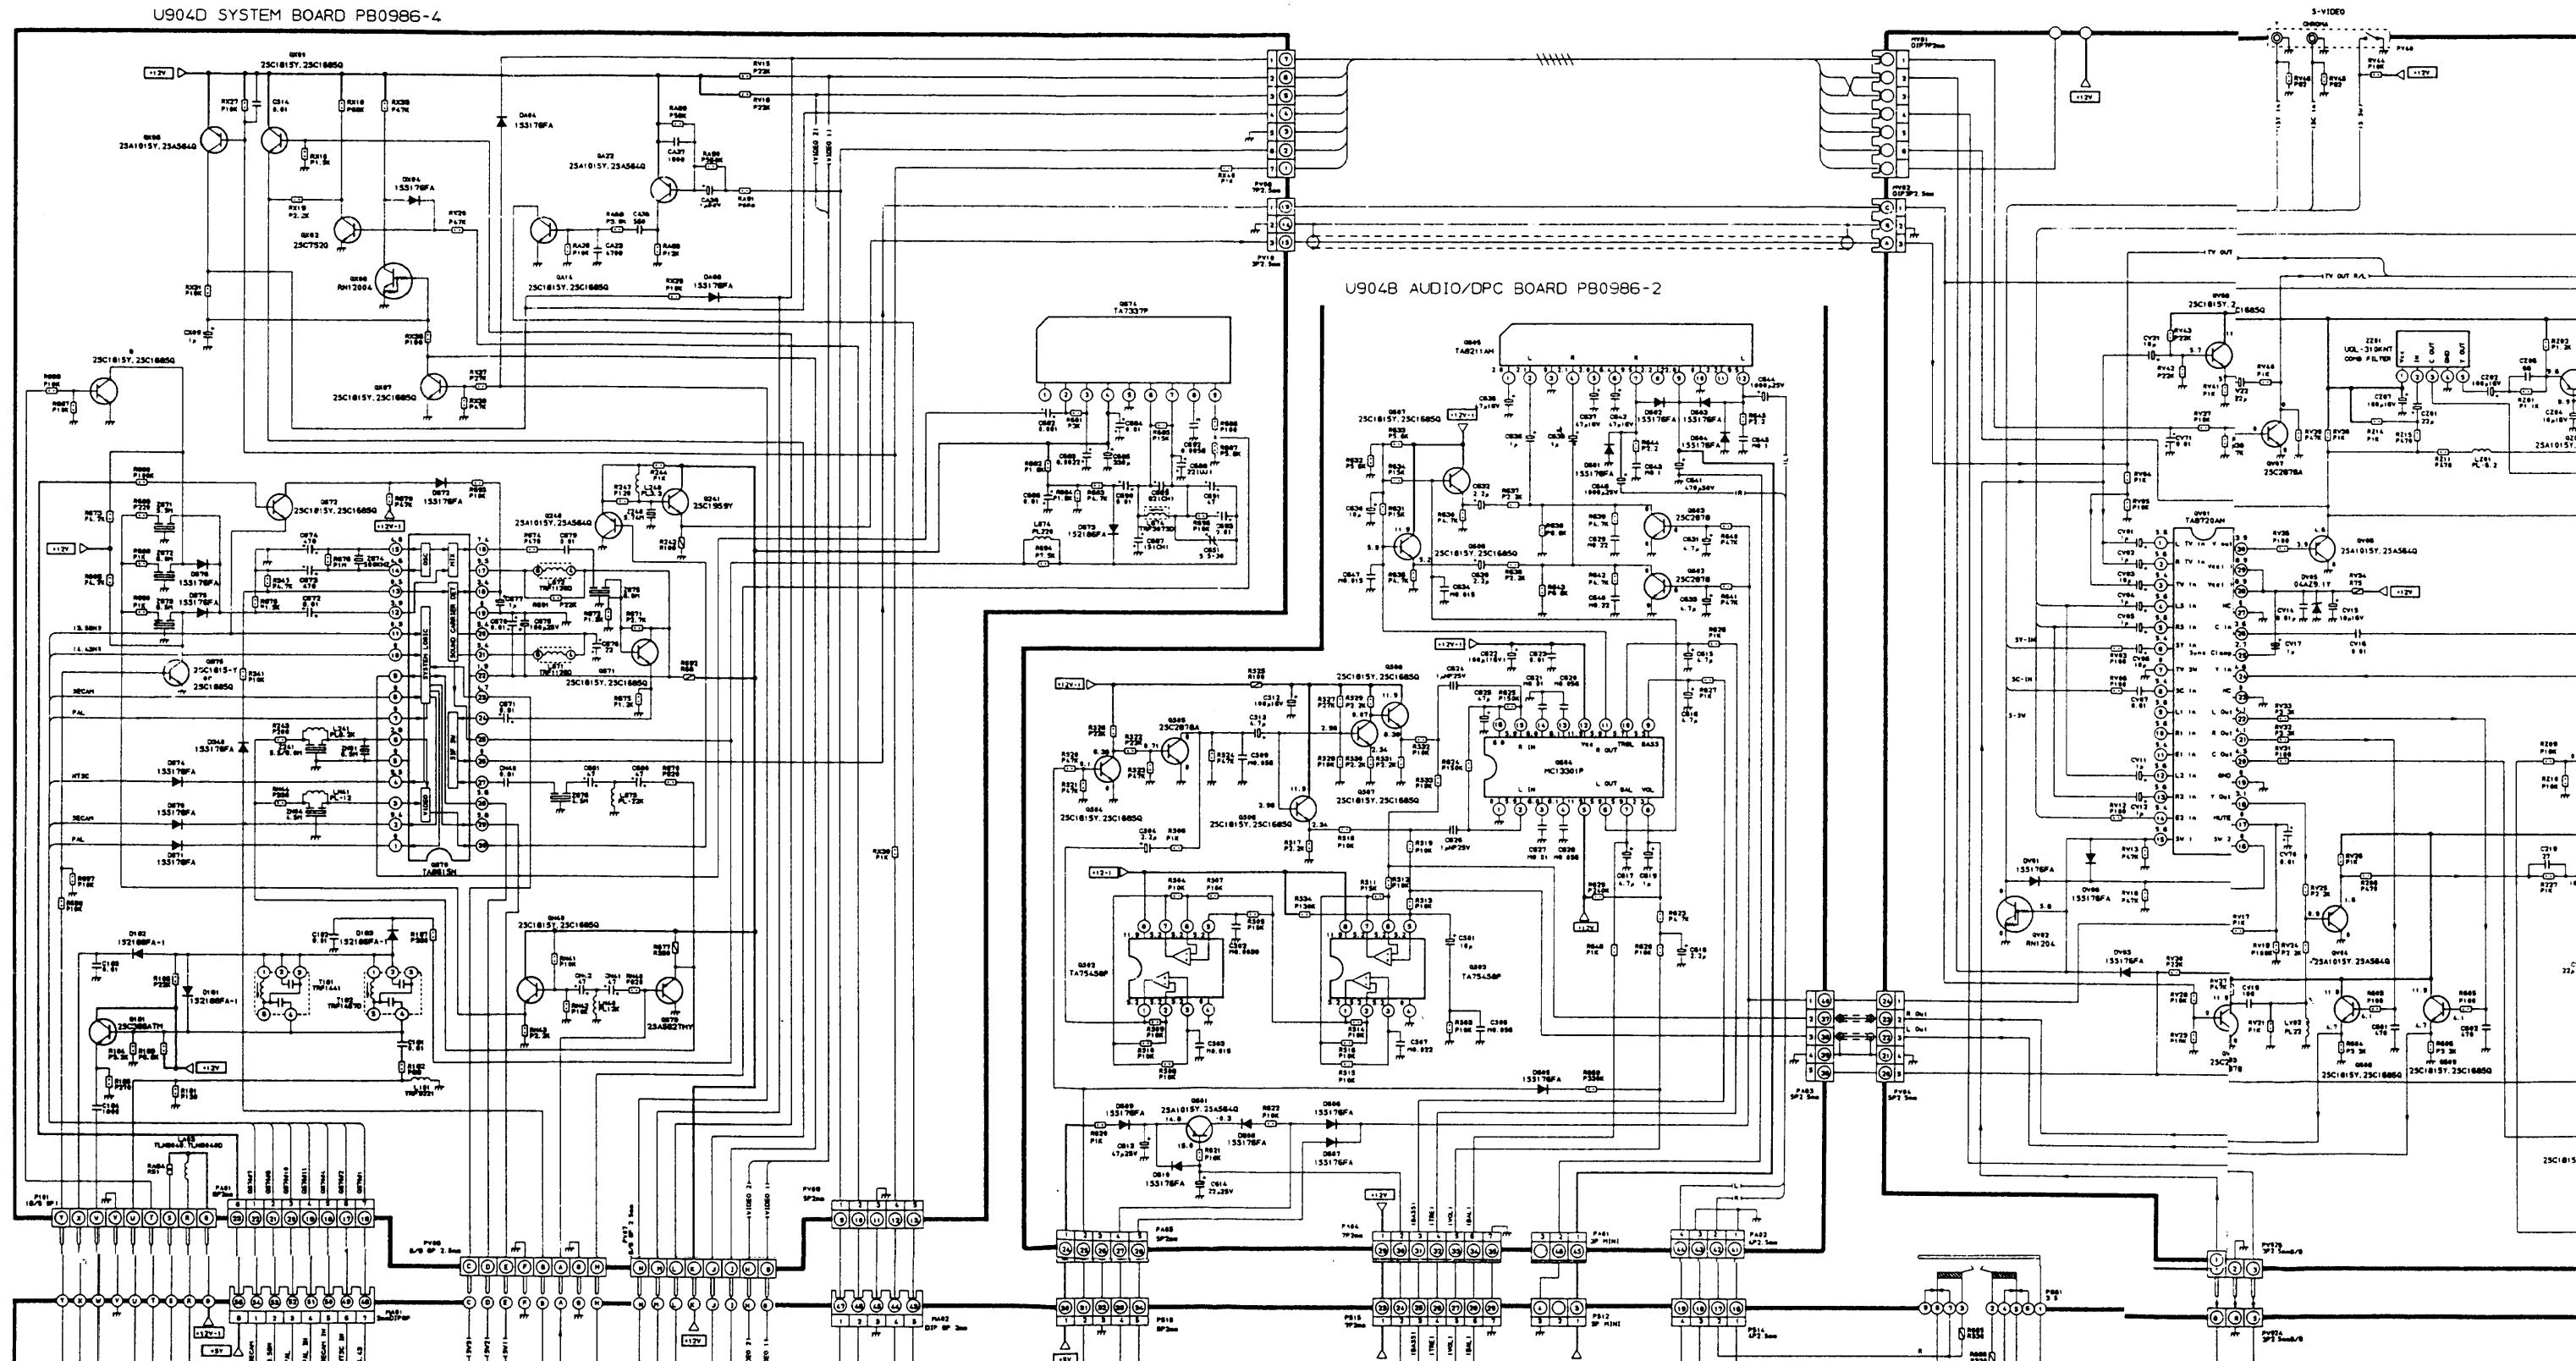

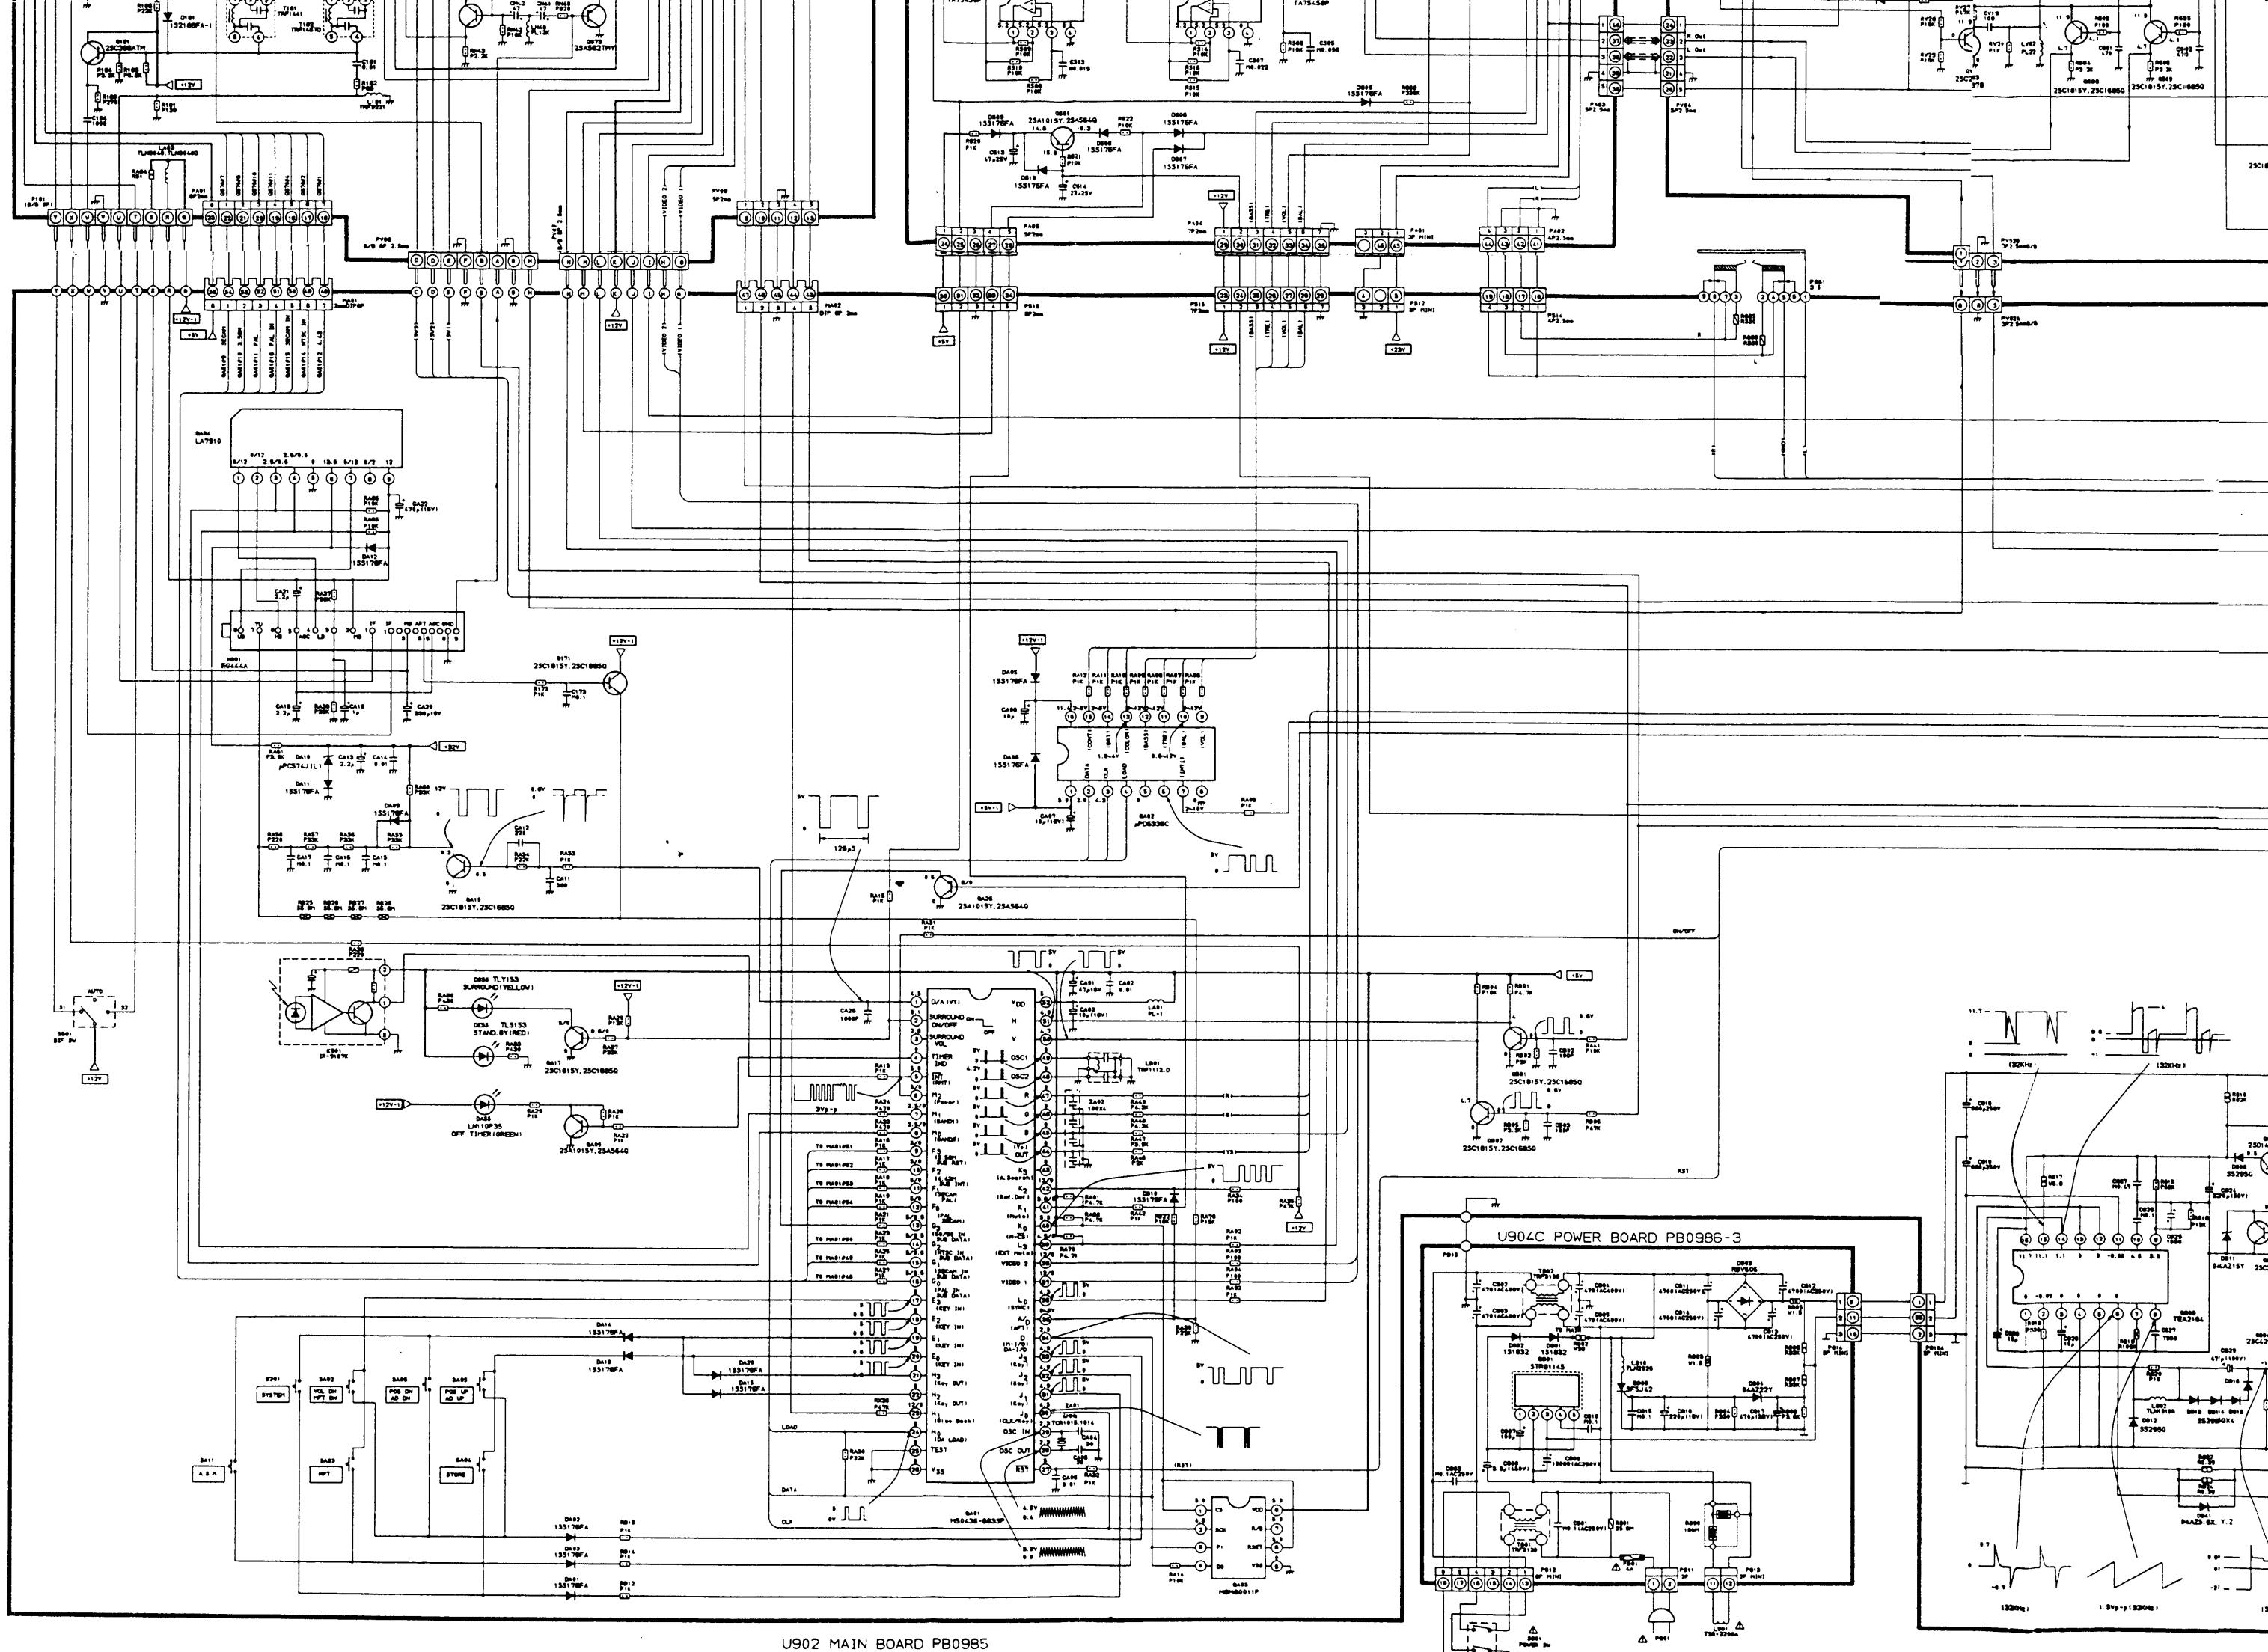

U902 MAIN BOARD PB0985

OTES:
D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
The circuits are subject to change without notice.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, $k=1,000$, $M=1,000,000$
 2. Unless otherwise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
 3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH , and the values less than 1 in H.

| RESISTOR | |
|-----------------------|---|
| Type | Mark |
| Carbon Composition | S |
| Oxide Metal Film | R |
| Insulated Carbon Film | P |
| Wire Wound | W |
| Cement | No Mark |
| Variable Resistor |  |
| Positive Thermistor |  |
| Negative Thermistor |  |
| Fusible Resistor | FR |

| Table 2 | | | |
|---------|------|------|------|
| Watt | Mark | Watt | Mark |
| W | -1- | 3 W | -2- |
| W | -2- | 5 W | -3- |
| W | -3- | 10 W | -10- |
| W | -4- | 15 W | -15- |
| W | -5- | 20 W | -20- |
| W | -6- | 25 W | -25- |

| Type | Mark |
|------------------------|------|
| Amic Disc 50V Only | II |
| Electrolytic | II |
| Electrolytic Non-Polar | II |
| Variable Capacitor | II |
| Other | II |

